

**PRODUCT
CARD**

BP2.EU

**TRAPEZOIDAL
STEEL SHEET**

T60



Trapezoidal sheets are widely used in the construction industry due to their high versatility. They are an excellent facade cladding and roof covering material for buildings: from the smallest (garages and sheds) to large production buildings and commercial facilities. Our offer includes a wide range of products, from economical solutions to tall construction profiles with parameters enabling their use in the most demanding industrial applications.



T60

Technical parameters [in mm]

Effective width	1002
Total width	~1040
Height of profile	61
Thickness of steel sheet	0,60–1,25
Max. length of sheet	14 000

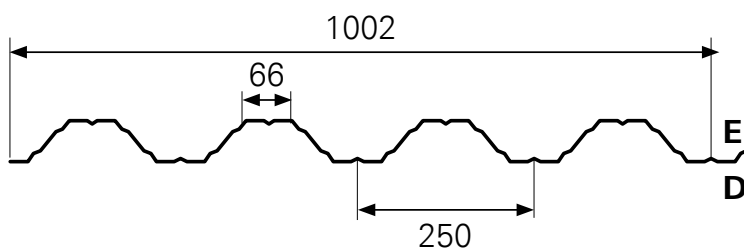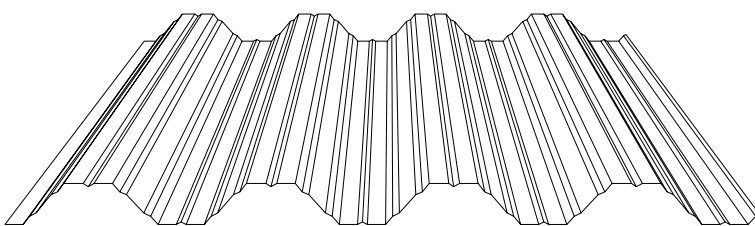

The assumption and a comment on the steel sheet resistance tables

Load-bearing capacity tables have been prepared for trapezoidal sheets manufactured by "BLACHPROFIL 2" used as single-span beams and continuous beams: two-span and three-span beams, as well as for overlapping sheets - as two- and three-span beams (tables for overlapping arrangements can be obtained by contacting the BLACHPROFIL 2 project sales department). Alternative supports (positive or negative) were taken into account.

The results were obtained on the basis of static-strength analysis of steel sheets treated as thin-walled elements according to the algorithm of Professor R. J. Garncarek from the Białystok University of Technology, according to PN-EN 1993-1-3: August 2008, as amended. The calculations were performed using the software developed by "KOTEX" (www.kotex.waw.pl).

In the calculations, the following assumptions were made in accordance with PN-EN 1993-1-3:

- elastic material with yield strength f_{yb} according to Table 3.1b;
- material safety factor $\gamma_m = 1.0$.

The tables summarize the design loads for limit state I (ULS), expressing the permissible load bearing capacity and the characteristic loads for limit state II (SLS), corresponding to the permissible deflections. The permissible loads in the SLS are specified for deflections $L/150$, $L/200$, and $L/300$. The loads are expressed in kN/m^2 .

The ranges of parameters for the analyzed metal sheets are stated below:

Type of metal sheet: T60

Steel: S250 GD, S280 GD, S320 GD,

**Sheet thicknesses: 0.60 mm, 0.63 mm, 0.70 mm, 0.75 mm, 0.80 mm,
0.88 mm, 1.00 mm, 1.15 mm, 1.25 mm, 1.50 mm**

The width of the intermediate support [b]: 60 mm, 80 mm, 120 mm, 160 mm, 300 mm

The span of the spans [m]: $L_{min} = 2.00$ m, $L_{max} = 8.00$ m

General recommendations

The tables indicate the extreme support widths (60 mm) recommended by the manufacturer while in the calculation, the extreme support width was assumed to be $a=10$ mm in accordance with a PN-EN standard. The tables for the regular, two- and three-span arrangements were prepared for intermediate support widths of $b=60$ mm, 100 mm, 140 mm, and 300 mm.

The design loads should be compared with the values in the tables - row 1, for a span not less than the value assumed in the design of the structure.

In the case of two- and three-span sheets, the table corresponding to the width of the intermediate support b not larger than the width assumed in the design of the structure should be chosen.

Linear interpolation can be used for both the intermediate support width b and the L span.


These tables may be used if the following conditions are met:

- the load acting on the assumed static systems is a uniformly distributed continuous load;
- the span lengths in multi-span arrangements do not differ by more than 5%, but to determine ULS and SLS, the largest length of the span is assumed;
- the trapezoidal sheet fixing method is in accordance with the manufacturer's instructions.

In other individual cases, it is recommended to consult a representative of our company.

Recommendations for overlapping arrangements


The tables have been prepared assuming overlaps equal to 0.1 of the span, as shown in Figure*:

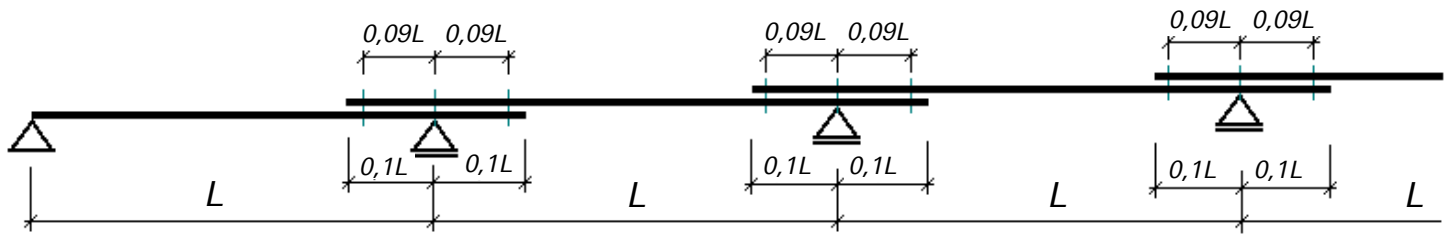

For overlap arrangements, the intermediate support must meet the condition of ≥ 60 mm.

The connectors should be placed above the support axes and on both sides of the support at a distance equal to 0.09 of the span:

The minimum distance between the center of gravity of the connectors and the support

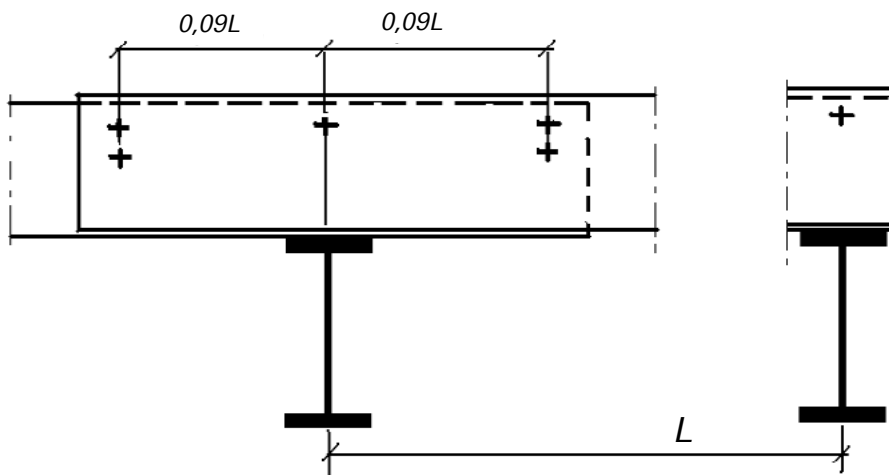


Sheet weight (kg/m²)


THICKNESS	WEIGHT
0,60	5,88
0,63	6,18
0,70	6,86
0,75	7,35
0,80	7,84
0,88	8,63
1,00	9,81
1,10	10,79
1,20	11,77
1,25	12,26

* Tables for overlapped layouts are available on request.


T60_2020		Positive		Negative																								
Number of spans: 1		support: 60 - 60																										
Thickness [k] [cm]	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00		
0.60	40.07	SGN	4.31	3.83	3.34	2.76	2.32	1.98	1.71	1.49	1.31	1.16	1.03	0.93	0.84	0.76	0.69	0.63	0.58	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33	
		SGU L1/50	4.31	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08	
		SGU L2/00	4.04	2.84	2.07	1.55	1.20	0.94	0.75	0.61	0.50	0.42	0.35	0.30	0.26	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.09	0.08	0.07	0.06	0.05	0.04
		SGU L3/00	2.69	1.89	1.38	1.04	0.80	0.63	0.50	0.41	0.34	0.28	0.24	0.20	0.17	0.15	0.13	0.11	0.10	0.09	0.08	0.07	0.06	0.06	0.05	0.05	0.04	
0.63	42.07	SGN	4.83	4.29	3.59	2.96	2.49	2.12	1.83	1.59	1.40	1.24	1.11	0.99	0.90	0.81	0.74	0.68	0.62	0.57	0.53	0.49	0.46	0.43	0.40	0.37	0.35	
		SGU L1/50	4.83	3.97	2.90	2.18	1.68	1.32	1.06	0.86	0.71	0.59	0.50	0.42	0.36	0.31	0.27	0.24	0.21	0.19	0.16	0.15	0.13	0.12	0.11	0.10	0.09	
		SGU L2/00	4.24	2.98	2.17	1.63	1.26	0.99	0.79	0.64	0.53	0.44	0.37	0.32	0.27	0.23	0.20	0.18	0.16	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.07	
		SGU L3/00	2.83	1.99	1.45	1.09	0.84	0.66	0.53	0.43	0.35	0.29	0.25	0.21	0.18	0.16	0.14	0.12	0.10	0.09	0.08	0.07	0.07	0.06	0.05	0.05	0.04	
0.70	46.75	SGN	5.98	5.10	4.13	3.42	2.87	2.45	2.11	1.84	1.61	1.43	1.28	1.15	1.03	0.94	0.85	0.78	0.72	0.66	0.61	0.57	0.53	0.49	0.46	0.43	0.40	
		SGU L1/50	5.98	4.41	3.22	2.42	1.86	1.46	1.17	0.95	0.79	0.65	0.55	0.47	0.40	0.35	0.30	0.26	0.23	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10	
		SGU L2/00	4.71	3.31	2.41	1.81	1.40	1.10	0.88	0.71	0.59	0.49	0.41	0.35	0.30	0.26	0.22	0.20	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	0.07	
		SGU L3/00	3.14	2.21	1.61	1.21	0.93	0.73	0.59	0.48	0.39	0.33	0.28	0.23	0.20	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.07	0.06	0.05	0.05	
0.75	50.09	SGN	6.86	5.57	4.51	3.73	3.14	2.67	2.30	2.01	1.76	1.56	1.39	1.25	1.13	1.02	0.93	0.85	0.78	0.72	0.67	0.62	0.58	0.54	0.50	0.47	0.44	
		SGU L1/50	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11	
		SGU L2/00	5.05	3.55	2.58	1.94	1.50	1.18	0.94	0.77	0.63	0.53	0.44	0.38	0.32	0.28	0.24	0.21	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08	
		SGU L3/00	3.37	2.36	1.72	1.29	1.00	0.78	0.63	0.51	0.42	0.35	0.30	0.25	0.22	0.19	0.16	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.06	0.05	
0.80	53.42	SGN	7.64	6.04	4.89	4.04	3.40	2.89	2.50	2.17	1.91	1.69	1.51	1.35	1.22	1.11	1.01	0.92	0.85	0.78	0.72	0.67	0.62	0.58	0.54	0.51	0.48	
		SGU L1/50	7.18	5.04	3.68	2.76	2.13	1.67	1.34	1.09	0.90	0.75	0.63	0.54	0.46	0.40	0.35	0.30	0.27	0.24	0.21	0.19	0.17	0.15	0.14	0.12	0.11	
		SGU L2/00	5.39	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08	
		SGU L3/00	3.59	2.52	1.84	1.38	1.06	0.84	0.67	0.54	0.45	0.37	0.32	0.27	0.23	0.20	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.06	0.06	0.05	
0.88	58.77	SGN	8.60	6.80	5.51	4.55	3.82	3.26	2.81	2.45	2.15	1.90	1.70	1.53	1.38	1.25	1.14	1.04	0.96	0.88	0.81	0.76	0.70	0.65	0.61	0.57	0.54	
		SGU L1/50	7.90	5.55	4.04	3.04	2.34	1.84	1.47	1.20	0.99	0.82	0.69	0.59	0.51	0.44	0.38	0.33	0.29	0.26	0.23	0.21	0.18	0.17	0.15	0.14	0.12	
		SGU L2/00	5.92	4.16	3.03	2.28	1.76	1.38	1.11	0.90	0.74	0.62	0.52	0.44	0.38	0.33	0.28	0.25	0.22	0.19	0.17	0.15	0.14	0.12	0.11	0.10	0.09	
		SGU L3/00	3.95	2.77	2.02	1.52	1.17	0.92	0.74	0.60	0.49	0.41	0.35	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.07	0.06	
1.00	66.78	SGN	10.08	7.96	6.45	5.33	4.48	3.82	3.29	2.87	2.52	2.23	1.99	1.79	1.61	1.46	1.33	1.22	1.12	1.03	0.95	0.88	0.82	0.77	0.72	0.67	0.63	
		SGU L1/50	8.98	6.30	4.60	3.45	2.66	2.09	1.67	1.36	1.12	0.94	0.79	0.67	0.57	0.50	0.43	0.38	0.33	0.29	0.26	0.23	0.21	0.19	0.17	0.15	0.14	
		SGU L2/00	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11	
		SGU L3/00	4.49	3.15	2.30	1.73	1.33	1.05	0.84	0.68	0.56	0.47	0.39	0.33	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.07	
1.15	76.80	SGN	11.98	9.47	7.67	6.34	5.33	4.54	3.91	3.41	3.00	2.65	2.37	2.12	1.92	1.74	1.58	1.45	1.33	1.23	1.13	1.05	0.98	0.91	0.85	0.80	0.75	
		SGU L1/50	10.32	7.25	5.28	3.97	3.06	2.41	1.93	1.57	1.29	1.08	0.91	0.77	0.66	0.57	0.50	0.43	0.38	0.34	0.30	0.27	0.24	0.22	0.20	0.18	0.16	
		SGU L2/00	7.74	5.44	3.96	2.98	2.29	1.80	1.44	1.17	0.97	0.81	0.68	0.58	0.50	0.43	0.37	0.33	0.29	0.25	0.23	0.20	0.18	0.16	0.15	0.13	0.12	
		SGU L3/00	5.16	3.62	2.64	1.99	1.53	1.20	0.96	0.78	0.65	0.54	0.45	0.39	0.33	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08	
1.25	83.48	SGN	13.28	10.50	8.50	7.03	5.90	5.03	4.34	3.78	3.32	2.94	2.62	2.36	2.13	1.93	1.76	1.61	1.48	1.36	1.26	1.17	1.08	1.01	0.94	0.88	0.83	
		SGU L1/50	11.22	7.88	5.74	4.32	3.32	2.61	2.09	1.70	1.40	1.17	0.98	0.84	0.72	0.62	0.54	0.47	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.18	
		SGU L2/00	8.41	5.91	4.31	3.24	2.49	1.96	1.57	1.28	1.05	0.88	0.74	0.63	0.54	0.47	0.40	0.35	0.31	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	
		SGU L3/00	5.61	3.94	2.87	2.16	1.66	1.31	1.05	0.85	0.70	0.58	0.49	0.42	0.36	0.31	0.27	0.24	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10	0.09	
1.50	100.17	SGN	16.65	13.16	10.66	8.81	7.40	6.31	5.44	4.74	4.16	3.69	3.29	2.95	2.66	2.42	2.20	2.01	1.85	1.70	1.58	1.46	1.36	1.27	1.18	1.11	1.04	
		SGU L1/50	13.46	9.46	6.89	5.18	3.99	3.14	2.51	2.04	1.68	1.40	1.18	1.00	0.86	0.74	0.65	0.57	0.50	0.44	0.39	0.35	0.31	0.28	0.26	0.23	0.21	
		SGU L2/00	10.10	7.09	5.17	3.88	2.99	2.35	1.88	1.53	1.26	1.05	0.89	0.75	0.65	0.56	0.49	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.17	0.16	
		SGU L3/00	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11	
Number of spans: 2		support: 60 - 60 - 60																										
Thickness [k] [cm]	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00		
0.60	40.07	SGN	3.45	2.89	2.45	2.11	1.84	1.62	1.43	1.28	1.14	1.03	0.94	0.85	0.78	0.72	0.66	0.61	0.57	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33	
		SGU L1/50	3.45	2.89	2.45	2.11	1.84	1.62	1.43	1.28	1.14	1.03	0.94	0.85	0.78	0.72	0.66	0.61	0.57	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33	
		SGU L2/00	3.45	2.89	2.45	2.11	1.84	1.62	1.43	1.28	1.14	1.03	0.94	0.85	0.78	0.72	0.66	0.61	0.57	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33	
		SGU L3/00	3.45	2.89	2.45	2.11	1.84	1.62	1.43	1.28	1.14	1.03	0.94	0.85	0.78	0.72	0.66	0.61	0.57	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33	
0.63	42.07	SGN	3.71	3.15	2.67	2.30	2.00	1.76	1.56	1.39	1.24	1.12	1.01	0.92	0.84	0.77	0.71	0.66	0.61	0.57	0.53	0.49	0.46	0.43	0.40	0.37	0.35	
		SGU L1/50	3.77	3.15	2.67	2.30	2.00	1.76	1.56	1.39	1.24	1.12	1.01	0.92	0.84	0.77	0.71	0.66	0.61	0.57	0.53	0.49	0.46	0.43	0.40	0.37	0.35	
		SGU L2/00	3.77	3.15	2.67	2.30																						



T60_2020		Positive=Negative		support: 60 - 60																											
Number of spans:	1	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00				
Thickness Jx[cm ⁴]	SGN	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00				
0.60	40.07	SGU L/150	4.31	3.83	3.34	2.76	2.32	1.98	1.71	1.49	1.31	1.16	1.03	0.93	0.84	0.76	0.69	0.63	0.58	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33	0.31	0.29	0.28	
		SGU L/200	4.04	2.84	2.07	1.55	1.20	0.94	0.75	0.61	0.50	0.42	0.35	0.30	0.26	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.05	0.04	0.03	0.02
		SGU L/300	2.69	1.89	1.38	1.04	0.80	0.63	0.50	0.41	0.34	0.28	0.24	0.20	0.17	0.15	0.13	0.11	0.10	0.09	0.08	0.07	0.06	0.05	0.04	0.03	0.02	0.01	0.00	0.00	0.00
0.63	42.07	SGN	4.63	4.29	3.99	2.96	2.49	2.12	1.83	1.59	1.40	1.24	1.11	0.99	0.90	0.81	0.74	0.68	0.62	0.57	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33	0.31	0.29	0.28
		SGU L/150	4.83	3.97	2.90	2.18	1.66	1.32	1.06	0.86	0.71	0.59	0.50	0.42	0.36	0.31	0.27	0.24	0.21	0.19	0.16	0.15	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.05
		SGU L/200	4.24	2.98	2.17	1.63	1.26	0.99	0.79	0.64	0.53	0.44	0.37	0.32	0.27	0.23	0.20	0.18	0.16	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.05	0.04	0.03	0.02
0.70	46.75	SGN	5.98	5.10	4.13	3.42	2.87	2.45	2.11	1.84	1.61	1.43	1.28	1.15	1.03	0.94	0.85	0.78	0.72	0.66	0.61	0.57	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33	
		SGU L/150	5.98	4.41	3.22	2.42	1.86	1.46	1.17	0.95	0.79	0.65	0.55	0.47	0.40	0.35	0.30	0.26	0.23	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10	0.09	0.08	0.07	
		SGU L/300	3.14	2.21	1.61	1.21	0.93	0.73	0.59	0.48	0.39	0.33	0.28	0.23	0.20	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.06	0.05	0.04	0.03	0.02	0.01	0.00	
0.75	50.09	SGN	6.86	5.57	4.51	3.73	3.14	2.67	2.30	2.01	1.76	1.56	1.39	1.25	1.13	1.02	0.93	0.85	0.78	0.72	0.67	0.62	0.58	0.54	0.50	0.47	0.44	0.41	0.38	0.36	
		SGU L/150	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11	0.10	0.09	0.08	
		SGU L/200	5.05	3.55	2.58	1.94	1.50	1.18	0.94	0.77	0.63	0.53	0.44	0.38	0.32	0.28	0.24	0.21	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.05	
0.80	53.42	SGN	7.64	6.04	4.89	4.04	3.40	2.89	2.50	2.17	1.91	1.69	1.51	1.35	1.22	1.11	1.01	0.92	0.85	0.78	0.72	0.67	0.62	0.58	0.54	0.51	0.48	0.45	0.42	0.40	
		SGU L/150	7.18	5.04	3.68	2.76	2.13	1.67	1.34	1.09	0.90	0.75	0.63	0.54	0.46	0.40	0.35	0.30	0.27	0.24	0.21	0.19	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	
		SGU L/200	5.39	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08	0.07	0.06	0.05	
0.88	58.77	SGN	8.60	6.80	5.51	4.55	3.82	3.26	2.81	2.45	2.15	1.90	1.70	1.53	1.38	1.25	1.14	1.04	0.96	0.88	0.81	0.76	0.70	0.65	0.61	0.57	0.54	0.51	0.48	0.46	
		SGU L/150	7.90	5.55	4.04	3.04	2.34	1.84	1.47	1.20	0.99	0.82	0.69	0.59	0.51	0.44	0.38	0.33	0.29	0.26	0.23	0.21	0.18	0.17	0.15	0.14	0.12	0.11	0.10	0.09	
		SGU L/200	5.92	4.16	3.03	2.28	1.76	1.38	1.11	0.90	0.74	0.62	0.52	0.44	0.38	0.33	0.28	0.25	0.22	0.19	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.06	
1.00	66.78	SGN	10.08	7.96	6.45	5.33	4.48	3.82	3.29	2.87	2.52	2.23	1.99	1.79	1.61	1.46	1.33	1.22	1.12	1.03	0.95	0.88	0.82	0.77	0.72	0.67	0.63	0.60	0.57	0.55	
		SGU L/150	8.98	6.30	4.60	3.45	2.66	2.09	1.67	1.36	1.12	0.94	0.79	0.67	0.57	0.50	0.43	0.38	0.33	0.29	0.26	0.23	0.21	0.19	0.17	0.15	0.14	0.12	0.11	0.10	
		SGU L/200	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11	0.10	0.09	0.08	
1.15	76.80	SGN	11.98	9.47	7.67	6.34	5.33	4.54	3.91	3.41	3.00	2.65	2.37	2.12	1.92	1.74	1.58	1.45	1.33	1.23	1.13	1.05	0.98	0.91	0.85	0.80	0.75	0.71	0.68	0.65	
		SGU L/150	10.32	7.25	5.28	3.97	3.06	2.41	1.93	1.57	1.29	1.08	0.91	0.77	0.66	0.57	0.50	0.43	0.38	0.34	0.30	0.27	0.24	0.22	0.20	0.18	0.16	0.15	0.13	0.12	
		SGU L/200	7.74	5.44	3.96	2.98	2.29	1.80	1.44	1.17	0.97	0.81	0.68	0.58	0.50	0.43	0.37	0.33	0.29	0.25	0.23	0.20	0.18	0.16	0.15	0.13	0.12	0.11	0.10	0.09	
1.25	83.48	SGN	13.28	10.50	8.50	7.03	5.90	5.03	4.34	3.78	3.32	2.94	2.62	2.36	2.13	1.93	1.76	1.61	1.48	1.36	1.26	1.17	1.08	1.01	0.94	0.88	0.83	0.78	0.73	0.69	0.65
		SGU L/150	11.22	7.88	5.74	4.32	3.32	2.61	2.09	1.70	1.40	1.17	0.98	0.84	0.72	0.62	0.54	0.47	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.18	0.16	0.15	0.13	
		SGU L/200	8.41	5.91	4.31	3.24	2.49	1.96	1.57	1.28	1.05	0.88	0.74	0.63	0.54	0.47	0.40	0.35	0.31	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	
1.50	100.17	SGN	16.65	13.16	10.66	8.81	7.40	6.31	5.44	4.74	4.16	3.69	3.29	2.95	2.66	2.42	2.20	2.01	1.85	1.70	1.58	1.46	1.36	1.27	1.18	1.11	1.04	0.97	0.91	0.85	
		SGU L/150	13.46	9.46	6.89	5.18	3.99	3.14	2.51	2.04	1.68	1.40	1.18	1.00	0.86	0.74	0.65	0.57	0.50	0.44	0.39	0.35	0.31	0.28	0.26	0.23	0.21	0.19	0.17	0.16	
		SGU L/200	10.10	7.09	5.17	3.88	2.99	2.35	1.88	1.53	1.26	1.05	0.89	0.75	0.65	0.56	0.49	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.17	0.16	0.14	0.13	0.12	
Number of spans:		2		support: 60 - 120 - 60																											
Thickness Jx[cm ⁴]	SGN	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00				
0.60	40.07	SGU L/150	3.86	3.20	2.71	2.32	2.01	1.76	1.55	1.38	1.23	1.11	1.00	0.91	0.83	0.76	0.69	0.63	0.58	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33	0.31	0.29		
		SGU L/200	3.86	3.20	2.71	2.32	2.01	1.76	1.55	1.38	1.23	1.11	1.00	0.91	0.83	0.76	0.69	0.63	0.58	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33	0.31	0.29		
		SGU L/300	3.86	3.20	2.71	2.32	2.01	1.76	1.55	1.38	1.23	1.11	1.00	0.91	0.83	0.76	0.69	0.63	0.58	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33	0.31	0.29		
0.63	42.07	SGN	4.20	3.49	2.94	2.52	2.18	1.91	1.68	1.49	1.33	1.20	1.08	0.98	0.90	0.81	0.74	0.68	0.62	0.57	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33	0.31	0.29	
		SGU L/150	4.20	3.49	2.94	2.52	2.18	1.91	1.68	1.49	1.33	1.20	1.08	0.98	0.90	0.81	0.74	0.68	0.62	0.57	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33	0.31	0.29	
		SGU L/200	4.20	3.49	2.94	2.52	2.18	1.91	1.68	1.49	1.33	1.20	1.08	0.98	0.90	0.81	0.74	0.68	0.62	0.57	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33	0.31	0.29	
0.70	46.75	SGN	4.94	4.09	3.45	2.95	2.55	2.23	1.97	1.74	1.56	1.4																			




T60_2020		Positive=Negative																									
Number of spans: 1		support: 60 - 60																									
Thickness [Jxcm4]	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00	
0.60	40.07	SGN	4.31	3.83	3.34	2.76	2.32	1.98	1.71	1.49	1.31	1.16	1.03	0.93	0.84	0.76	0.69	0.63	0.58	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33
		SGU L150	4.31	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08
		SGU L200	4.04	2.84	2.07	1.55	1.20	0.94	0.75	0.61	0.50	0.42	0.35	0.30	0.26	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.09	0.08	0.08	0.07	0.06
		SGU L300	2.69	1.89	1.38	1.04	0.80	0.63	0.50	0.41	0.34	0.28	0.24	0.20	0.17	0.15	0.13	0.11	0.10	0.09	0.08	0.07	0.06	0.06	0.05	0.05	0.04
0.63	42.07	SGN	4.83	4.29	3.59	2.96	2.49	2.12	1.83	1.59	1.40	1.24	1.11	0.99	0.90	0.81	0.74	0.68	0.62	0.57	0.53	0.49	0.46	0.43	0.40	0.37	0.35
		SGU L150	4.83	3.97	2.90	2.18	1.68	1.32	1.06	0.86	0.71	0.59	0.50	0.42	0.36	0.31	0.27	0.24	0.21	0.19	0.16	0.15	0.13	0.12	0.11	0.10	0.09
		SGU L200	4.24	2.98	2.17	1.63	1.26	0.99	0.79	0.64	0.53	0.44	0.37	0.32	0.27	0.23	0.20	0.18	0.16	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.07
		SGU L300	2.83	1.99	1.45	1.09	0.84	0.66	0.53	0.43	0.35	0.29	0.25	0.21	0.18	0.16	0.14	0.12	0.10	0.09	0.08	0.07	0.07	0.06	0.05	0.05	0.04
0.70	46.75	SGN	5.98	5.10	4.13	3.42	2.87	2.45	2.11	1.84	1.61	1.43	1.28	1.15	1.03	0.94	0.85	0.78	0.72	0.66	0.61	0.57	0.53	0.49	0.46	0.43	0.40
		SGU L150	5.98	4.41	3.22	2.42	1.86	1.46	1.17	0.95	0.79	0.65	0.55	0.47	0.40	0.35	0.30	0.26	0.23	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10
		SGU L200	4.71	3.31	2.41	1.81	1.40	1.10	0.88	0.71	0.58	0.49	0.41	0.35	0.30	0.26	0.23	0.20	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	0.07
		SGU L300	3.14	2.21	1.61	1.21	0.93	0.73	0.59	0.48	0.39	0.33	0.28	0.23	0.20	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.07	0.06	0.05	0.05
0.75	50.09	SGN	6.86	5.57	4.51	3.73	3.14	2.67	2.30	2.01	1.76	1.56	1.39	1.25	1.13	1.02	0.93	0.85	0.78	0.72	0.67	0.62	0.58	0.54	0.50	0.47	0.44
		SGU L150	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11
		SGU L200	5.05	3.55	2.58	1.94	1.50	1.18	0.94	0.77	0.63	0.53	0.44	0.38	0.32	0.28	0.24	0.21	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08
		SGU L300	3.37	2.36	1.72	1.29	1.00	0.78	0.63	0.51	0.42	0.35	0.30	0.25	0.22	0.19	0.16	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.05	0.05
0.80	53.42	SGN	7.64	6.04	4.89	4.04	3.40	2.89	2.50	2.17	1.91	1.69	1.51	1.35	1.22	1.11	1.01	0.92	0.85	0.78	0.72	0.67	0.62	0.58	0.54	0.51	0.48
		SGU L150	7.18	5.04	3.68	2.76	2.13	1.67	1.34	1.09	0.90	0.75	0.63	0.54	0.46	0.40	0.35	0.30	0.27	0.24	0.21	0.19	0.17	0.15	0.14	0.12	0.11
		SGU L200	5.39	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08
		SGU L300	3.59	2.52	1.84	1.38	1.06	0.84	0.67	0.54	0.45	0.37	0.32	0.27	0.23	0.20	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.06	0.05	0.05
0.88	58.77	SGN	8.60	6.80	5.51	4.55	3.82	3.26	2.81	2.45	2.15	1.90	1.70	1.53	1.38	1.25	1.14	1.04	0.96	0.88	0.81	0.76	0.70	0.65	0.61	0.57	0.54
		SGU L150	7.90	5.55	4.04	3.04	2.34	1.84	1.47	1.20	0.99	0.82	0.69	0.59	0.51	0.44	0.38	0.33	0.29	0.26	0.23	0.21	0.18	0.17	0.15	0.14	0.12
		SGU L200	5.92	4.16	3.03	2.28	1.76	1.38	1.11	0.90	0.74	0.62	0.52	0.44	0.38	0.33	0.28	0.25	0.22	0.19	0.17	0.15	0.14	0.12	0.11	0.10	0.09
		SGU L300	3.95	2.77	2.02	1.52	1.17	0.92	0.74	0.60	0.49	0.41	0.35	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.07	0.06
1.00	66.78	SGN	10.08	7.96	6.45	5.33	4.48	3.82	3.29	2.87	2.52	2.23	1.99	1.79	1.61	1.46	1.33	1.22	1.12	1.03	0.95	0.88	0.82	0.77	0.72	0.67	0.63
		SGU L150	8.98	6.30	4.60	3.45	2.66	2.09	1.67	1.36	1.12	0.94	0.79	0.67	0.57	0.50	0.43	0.38	0.33	0.29	0.26	0.23	0.21	0.19	0.17	0.15	0.14
		SGU L200	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11
		SGU L300	4.49	3.15	2.30	1.73	1.33	1.05	0.84	0.68	0.56	0.47	0.39	0.33	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.07
1.15	76.80	SGN	11.98	9.47	7.67	6.34	5.33	4.54	3.91	3.41	3.00	2.65	2.37	2.12	1.92	1.74	1.58	1.45	1.33	1.23	1.13	1.05	0.98	0.91	0.85	0.80	0.75
		SGU L150	10.32	7.25	5.28	3.97	3.06	2.41	1.93	1.57	1.29	1.08	0.91	0.77	0.66	0.57	0.50	0.43	0.38	0.34	0.30	0.27	0.24	0.22	0.20	0.18	0.16
		SGU L200	7.74	5.44	3.96	2.98	2.29	1.80	1.44	1.17	0.97	0.81	0.68	0.58	0.50	0.43	0.37	0.33	0.29	0.25	0.23	0.20	0.18	0.16	0.15	0.13	0.12
		SGU L300	5.16	3.62	2.64	1.99	1.50	1.20	0.96	0.78	0.65	0.54	0.45	0.39	0.33	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08
1.25	83.48	SGN	13.26	10.50	8.50	7.03	5.90	5.03	4.34	3.78	3.32	2.94	2.62	2.36	2.13	1.93	1.76	1.61	1.48	1.36	1.26	1.17	1.08	1.01	0.94	0.88	0.83
		SGU L150	11.22	7.86	5.74	4.32	3.20	2.61	2.09	1.70	1.40	1.17	0.98	0.84	0.72	0.62	0.54	0.47	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.18
		SGU L200	8.41	5.91	4.31	3.24	2.49	1.96	1.57	1.28	1.05	0.88	0.74	0.63	0.54	0.47	0.40	0.35	0.31	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13
		SGU L300	5.61	3.94	2.87	2.16	1.66	1.31	1.05	0.85	0.70	0.58	0.49	0.42	0.36	0.31	0.27	0.24	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10	0.09
1.50	100.17	SGN	16.65	13.16	10.66	8.81	7.40	6.31	5.44	4.74	4.16	3.69	3.29	2.95	2.66	2.42	2.20	2.01	1.85	1.70	1.58	1.46	1.36	1.27	1.18	1.11	1.04
		SGU L150	13.46	9.46	6.89	5.18	3.99	3.14	2.51	2.04	1.68	1.40	1.18	1.00	0.86	0.74	0.65	0.57	0.50	0.44	0.39	0.35	0.31	0.28	0.26	0.24	0.21
		SGU L200	10.10	7.09	5.17	3.88	2.99	2.35	1.88	1.53	1.26	1.05	0.89	0.75	0.65	0.56	0.49	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.17	0.16
		SGU L300	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11
Number of spans: 2		support: 60 - 300 - 300 - 60																									
Thickness [Jxcm4]	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00	
0.60	40.07	SGN	4.40	3.62	3.03	2.58	2.22	1.94	1.70	1.49	1.31	1.16	1.03	0.93	0.84	0.76	0.69	0.63	0.58	0.53	0.49	0.46	0.43	0.40	0.37	0.35	0.33
		SGU L150	4.40	3.62	3.03	2.58	2.22	1.94	1.70	1.49	1.31	1.16	1.03	0.93	0.83	0.72	0.62	0.55	0.48	0.42	0.38	0.34	0.30	0.27	0.25	0.22	0.20
		SGU L200	4.40	3.62	3.03	2.58	2.22	1.94	1.70	1.47	1.21	1.01	0.85	0.73	0.62	0.54	0.47	0.41	0.36	0.32	0.28	0.25	0.23	0.20	0.18	0.17	0.15
		SGU L300	4.40	3.62	3.03	2.49	1.92	1.51	1.21	0.98	0.81	0.67	0.57	0.48	0.41	0.36	0.31	0.27	0.24	0.21	0.19	0.17	0.15	0.14	0.12	0.11	0.10
0.63	42.07	SGN	4.77	3.92	3.28	2.79	2.41	2.09	1.83	1.59	1.40	1.24	1.11	0.99	0.90	0.81	0.74	0.68	0.62	0.57	0.53	0.49	0.46	0.43	0.40	0.37	0.35
		SGU L150	4.77	3.92	3.28	2.79	2.41	2.09	1.83	1.55	1.27	1.06	0.90	0.76	0.65	0.56	0.49	0.43	0.38	0.33	0.30	0.27	0.24	0.21	0.19	0.18	0.16
		SGU L200	4.77	3.92</																							




T60_2020		Positive=Negative																									
Number of spans: 1		support: 60 - 60																									
Thickness Jx[cm ⁴]	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00	
0.60	40.07	SGN	4.56	4.06	3.65	3.02	2.54	2.16	1.87	1.63	1.43	1.27	1.13	1.01	0.91	0.83	0.76	0.69	0.64	0.59	0.54	0.50	0.47	0.44	0.41	0.38	0.36
		SGU L150	4.56	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08
		SGU L200	4.04	2.84	2.07	1.55	1.20	0.94	0.75	0.61	0.50	0.42	0.35	0.30	0.26	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06
0.63	42.07	SGU L300	2.69	1.89	1.38	1.04	0.80	0.63	0.50	0.41	0.34	0.28	0.24	0.20	0.17	0.15	0.13	0.11	0.10	0.09	0.08	0.07	0.06	0.06	0.05	0.05	0.04
		SGN	5.11	4.54	3.94	3.25	2.73	2.33	2.01	1.75	1.54	1.36	1.21	1.09	0.98	0.89	0.81	0.74	0.68	0.63	0.58	0.54	0.50	0.47	0.44	0.41	0.38
		SGU L150	5.11	3.97	2.90	2.18	1.68	1.32	1.06	0.86	0.71	0.59	0.50	0.42	0.36	0.31	0.27	0.24	0.21	0.19	0.16	0.15	0.13	0.12	0.11	0.10	0.09
0.70	46.75	SGU L200	4.24	2.98	2.17	1.63	1.26	0.99	0.79	0.64	0.53	0.44	0.37	0.32	0.27	0.23	0.20	0.18	0.16	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.07
		SGU L300	2.83	1.99	1.45	1.09	0.84	0.66	0.53	0.43	0.35	0.29	0.25	0.21	0.18	0.16	0.14	0.12	0.10	0.09	0.08	0.07	0.07	0.06	0.05	0.05	0.04
		SGN	6.32	5.62	4.58	3.78	3.18	2.71	2.34	2.03	1.79	1.58	1.41	1.27	1.14	1.04	0.95	0.87	0.79	0.73	0.68	0.63	0.58	0.54	0.51	0.48	0.45
0.75	50.09	SGU L150	6.28	4.41	3.22	2.42	1.86	1.46	1.17	0.95	0.79	0.65	0.55	0.47	0.40	0.35	0.30	0.26	0.23	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10
		SGU L200	4.71	3.31	2.41	1.81	1.40	1.10	0.88	0.71	0.59	0.49	0.41	0.35	0.30	0.26	0.23	0.20	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	0.07
		SGU L300	3.14	2.21	1.61	1.21	0.93	0.73	0.59	0.48	0.39	0.33	0.28	0.23	0.20	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.07	0.06	0.05	0.05
0.80	53.42	SGN	7.26	6.18	5.00	4.14	3.48	2.96	2.55	2.22	1.95	1.73	1.54	1.39	1.25	1.13	1.03	0.95	0.87	0.80	0.74	0.69	0.64	0.60	0.56	0.52	0.49
		SGU L150	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11
		SGU L200	5.05	3.55	2.58	1.94	1.50	1.18	0.94	0.77	0.63	0.53	0.44	0.38	0.32	0.28	0.24	0.21	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08
0.88	58.77	SGU L300	3.37	2.36	1.72	1.29	1.00	0.78	0.63	0.51	0.42	0.35	0.30	0.25	0.22	0.19	0.16	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.06	0.05
		SGN	8.26	6.70	5.42	4.48	3.77	3.21	2.77	2.41	2.12	1.88	1.67	1.50	1.36	1.23	1.12	1.03	0.94	0.87	0.80	0.74	0.69	0.64	0.60	0.56	0.53
		SGU L150	7.18	5.04	3.68	2.76	2.13	1.67	1.34	1.09	0.90	0.75	0.63	0.54	0.46	0.40	0.35	0.30	0.27	0.24	0.21	0.19	0.17	0.15	0.14	0.12	0.11
1.00	66.78	SGU L200	5.39	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08
		SGU L300	3.59	2.52	1.84	1.38	1.06	0.84	0.67	0.54	0.45	0.37	0.32	0.27	0.23	0.20	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.06	0.06	0.05
		SGN	9.55	7.54	6.11	5.05	4.24	3.62	3.12	2.72	2.39	2.11	1.89	1.69	1.53	1.39	1.26	1.16	1.06	0.98	0.90	0.84	0.78	0.73	0.68	0.64	0.61
1.15	76.80	SGU L150	7.90	5.55	4.04	3.04	2.34	1.84	1.47	1.20	0.99	0.82	0.69	0.59	0.51	0.44	0.38	0.33	0.29	0.26	0.23	0.21	0.18	0.17	0.15	0.14	0.12
		SGU L200	5.92	4.16	3.03	2.28	1.76	1.38	1.11	0.90	0.74	0.62	0.52	0.44	0.38	0.33	0.28	0.25	0.22	0.19	0.17	0.15	0.14	0.12	0.11	0.10	0.09
		SGN	3.95	2.77	2.02	1.52	1.17	0.92	0.74	0.60	0.49	0.41	0.35	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.07	0.06
1.25	83.48	SGU L150	8.98	6.30	4.60	3.45	2.66	2.09	1.67	1.36	1.12	0.94	0.79	0.67	0.57	0.50	0.43	0.38	0.33	0.29	0.26	0.23	0.21	0.19	0.17	0.15	0.14
		SGU L200	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11
		SGN	13.33	10.53	8.53	7.05	5.93	5.05	4.35	3.79	3.25	2.95	2.63	2.36	2.13	1.93	1.76	1.61	1.48	1.37	1.26	1.17	1.09	1.01	0.95	0.89	0.83
1.50	100.17	SGU L150	10.32	7.25	5.28	3.97	3.06	2.41	1.93	1.57	1.29	1.08	0.91	0.77	0.66	0.57	0.50	0.43	0.38	0.34	0.30	0.27	0.24	0.22	0.20	0.18	0.16
		SGU L200	7.74	5.44	3.98	2.98	2.29	1.80	1.44	1.17	0.97	0.81	0.69	0.58	0.50	0.43	0.37	0.33	0.29	0.25	0.23	0.20	0.18	0.16	0.15	0.13	0.12
		SGU L300	5.16	3.62	2.64	1.99	1.53	1.20	0.96	0.78	0.65	0.54	0.45	0.39	0.33	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08
1.50	83.48	SGN	14.79	11.69	9.47	7.82	6.57	5.60	4.83	4.21	3.70	3.28	2.92	2.62	2.37	2.15	1.96	1.79	1.64	1.51	1.40	1.30	1.21	1.13	1.05	0.98	0.92
		SGU L150	11.22	7.88	5.74	4.32	3.32	2.61	2.09	1.70	1.40	1.17	0.98	0.84	0.72	0.62	0.54	0.47	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.18
		SGU L200	8.41	5.91	4.31	3.24	2.49	1.96	1.57	1.28	1.05	0.88	0.74	0.63	0.54	0.47	0.40	0.35	0.31	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13
1.50	100.17	SGU L300	5.61	3.94	2.87	2.16	1.66	1.31	1.05	0.85	0.70	0.58	0.49	0.42	0.36	0.31	0.27	0.24	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10	0.09
		SGN	18.54	14.65	11.87	9.81	8.24	7.02	6.05	5.27	4.64	4.11	3.66	3.29	2.97	2.69	2.45	2.24	2.06	1.90	1.76	1.63	1.51	1.41	1.32	1.23	1.16
		SGU L150	13.46	9.46	6.89	5.18	3.99	3.14	2.51	2.04	1.68	1.40	1.18	1.00	0.86	0.74	0.65	0.57	0.50	0.44	0.39	0.35	0.31	0.28	0.26	0.23	0.21
1.50	83.48	SGU L200	10.10	7.09	5.17	3.88	2.99	2.35	1.88	1.53	1.26	1.05	0.89	0.75	0.65	0.56	0.49	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.17	0.16
		SGU L300	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11







		Positive=Negative																											
T60 2020	Number of spans: 1	Thickness [Jx[cm4]]	Case	support: 60 - 60																									
				2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00	
0.60	40.07	SGU L150	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00	
			SGN	4.56	4.06	3.65	3.02	2.54	2.16	1.87	1.63	1.43	1.27	1.13	1.01	0.91	0.83	0.76	0.69	0.64	0.59	0.54	0.50	0.47	0.44	0.41	0.38	0.36	
			SGU L150	4.56	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08	
			SGU L200	4.04	2.84	2.07	1.55	1.20	0.94	0.75	0.61	0.50	0.42	0.35	0.30	0.26	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06	
			SGU L300	2.69	1.89	1.38	1.04	0.80	0.63	0.50	0.41	0.34	0.28	0.24	0.20	0.17	0.15	0.13	0.11	0.10	0.09	0.08	0.07	0.06	0.06	0.05	0.05	0.04	
	0.63	42.07	SGU L150	Case	5.11	4.54	3.94	3.25	2.73	2.33	2.01	1.75	1.54	1.36	1.21	1.09	0.98	0.89	0.81	0.74	0.68	0.63	0.58	0.54	0.50	0.47	0.44	0.41	0.38
				SGN	5.11	3.97	2.90	2.18	1.68	1.32	1.06	0.86	0.71	0.59	0.50	0.42	0.36	0.31	0.27	0.24	0.21	0.19	0.16	0.15	0.13	0.12	0.11	0.10	0.09
				SGU L200	4.24	2.98	2.17	1.63	1.26	0.99	0.79	0.64	0.53	0.44	0.37	0.32	0.27	0.23	0.20	0.18	0.16	0.14	0.12	0.11	0.10	0.09	0.07	0.07	0.07
				SGU L300	2.83	1.99	1.45	1.09	0.84	0.66	0.53	0.43	0.35	0.29	0.25	0.21	0.18	0.16	0.14	0.12	0.10	0.09	0.08	0.07	0.07	0.06	0.05	0.05	0.04
				SGN	6.32	5.62	4.58	3.78	3.18	2.71	2.34	2.03	1.79	1.58	1.41	1.27	1.14	1.04	0.95	0.87	0.79	0.73	0.68	0.63	0.58	0.54	0.51	0.48	0.45
0.70	46.75	SGU L150	Case	6.28	4.41	3.22	2.42	1.86	1.46	1.17	0.95	0.79	0.65	0.55	0.47	0.40	0.35	0.30	0.26	0.23	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10	
			SGN	6.28	4.41	3.22	2.42	1.86	1.46	1.17	0.95	0.79	0.65	0.55	0.47	0.40	0.35	0.30	0.26	0.23	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10	
			SGU L200	4.71	3.31	2.41	1.81	1.40	1.10	0.88	0.71	0.59	0.49	0.41	0.35	0.30	0.26	0.22	0.20	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	0.07	
			SGU L300	3.14	2.21	1.61	1.21	0.93	0.73	0.59	0.48	0.39	0.33	0.28	0.23	0.20	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.07	0.06	0.05	0.05	
			SGN	7.26	6.18	5.00	4.14	3.48	2.96	2.55	2.22	1.95	1.73	1.54	1.39	1.25	1.13	1.03	0.95	0.87	0.80	0.74	0.69	0.64	0.60	0.56	0.52	0.49	
	0.75	50.09	SGU L150	Case	6.73	4.73	3.45	2.59	1.99	1.57	1.25	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11
				SGN	6.73	4.73	3.45	2.59	1.99	1.57	1.25	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11
				SGU L200	5.05	3.55	2.58	1.94	1.50	1.18	0.94	0.77	0.63	0.53	0.44	0.38	0.32	0.28	0.24	0.21	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08
				SGU L300	3.37	2.36	1.72	1.29	1.00	0.78	0.63	0.51	0.42	0.35	0.30	0.25	0.22	0.19	0.16	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.06	0.05
				SGN	8.26	6.70	5.42	4.48	3.77	3.21	2.77	2.41	2.12	1.88	1.67	1.50	1.36	1.23	1.12	1.03	0.94	0.87	0.80	0.74	0.69	0.64	0.60	0.56	0.53
0.80	53.42	SGU L150	Case	7.18	5.04	3.68	2.76	2.13	1.67	1.34	1.09	0.90	0.75	0.63	0.54	0.46	0.40	0.35	0.30	0.27	0.24	0.21	0.19	0.17	0.15	0.14	0.12	0.11	
			SGN	7.18	5.04	3.68	2.76	2.13	1.67	1.34	1.09	0.90	0.75	0.63	0.54	0.46	0.40	0.35	0.30	0.27	0.24	0.21	0.19	0.17	0.15	0.14	0.12	0.11	
			SGU L200	5.39	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08	
			SGU L300	3.59	2.52	1.84	1.38	1.06	0.84	0.67	0.54	0.45	0.37	0.32	0.27	0.23	0.20	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.06	0.06	0.05	
			SGN	9.55	7.54	6.11	5.05	4.24	3.62	3.12	2.72	2.39	2.11	1.89	1.69	1.53	1.39	1.26	1.16	1.06	0.98	0.90	0.84	0.78	0.73	0.68	0.64	0.60	
	0.88	58.77	SGU L150	Case	7.90	5.55	4.04	3.04	2.34	1.84	1.47	1.20	0.99	0.82	0.69	0.59	0.51	0.44	0.38	0.33	0.29	0.26	0.23	0.21	0.18	0.17	0.14	0.14	0.12
				SGN	7.90	5.55	4.04	3.04	2.34	1.84	1.47	1.20	0.99	0.82	0.69	0.59	0.51	0.44	0.38	0.33	0.29	0.26	0.23	0.21	0.18	0.17	0.14	0.14	0.12
				SGU L200	5.92	4.16	3.03	2.28	1.76	1.38	1.11	0.90	0.74	0.62	0.52	0.44	0.38	0.33	0.28	0.25	0.22	0.19	0.17	0.15	0.14	0.12	0.11	0.10	0.09
				SGU L300	3.95	2.77	2.02	1.52	1.17	0.92	0.74	0.60	0.49	0.41	0.35	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.07	0.06
				SGN	11.20	8.85	7.17	5.92	4.98	4.24	3.66	3.19	2.80	2.48	2.21	1.99	1.79	1.63	1.48	1.36	1.24	1.15	1.06	0.98	0.91	0.85	0.80	0.75	0.70
1.00	66.78	SGU L150	Case	8.98	6.30	4.60	3.45	2.66	2.09	1.67	1.36	1.12	0.94	0.79	0.67	0.57	0.50	0.43	0.38	0.33	0.29	0.26	0.23	0.21	0.19	0.17	0.15	0.14	
			SGN	8.98	6.30	4.60	3.45	2.66	2.09	1.67	1.36	1.12	0.94	0.79	0.67	0.57	0.50	0.43	0.38	0.33	0.29	0.26	0.23	0.21	0.19	0.17	0.15	0.14	
			SGU L200	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11	
			SGU L300	4.49	3.15	2.30	1.73	1.33	1.05	0.84	0.68	0.56	0.47	0.39	0.33	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.06	
			SGN	13.33	10.53	8.53	7.05	5.93	5.05	4.35	3.79	3.33	2.95	2.63	2.36	2.13	1.93	1.76	1.61	1.48	1.37	1.26	1.17	1.09	1.01	0.95	0.89	0.83	
	1.15	76.80	SGU L150	Case	10.32	7.25	5.28	3.97	3.06	2.41	1.93	1.57	1.29	1.08	0.91	0.77	0.66	0.57	0.50	0.43	0.38	0.34	0.30	0.27	0.24	0.22	0.20	0.18	0.16
				SGN	10.32	7.25	5.28	3.97	3.06	2.41	1.93	1.57	1.29	1.08	0.91	0.77	0.66	0.57	0.50	0.43	0.38	0.34	0.30	0.27	0.24	0.22	0.20	0.18	0.16
				SGU L200	7.74	5.44	3.96	2.98	2.29	1.80	1.44	1.17	0.97	0.81	0.68	0.58	0.50	0.43	0.37	0.33	0.29	0.25	0.23	0.20	0.18	0.16	0.14	0.13	0.12
				SGU L300	5.16	3.62	2.64	1.99	1.53	1.20	0.96	0.78	0.65	0.54	0.45	0.38	0.33	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08
				SGN	14.79	11.69	9.47	7.82	6.57	5.60	4.83	4.21	3.70	3.28	2.92	2.62	2.37	2.15	1.96	1.79	1.64	1.51	1.40	1.30	1.21	1.13	1.05	0.98	0.92
1.25	83.48	SGU L150	Case	11.22	7.88	5.74	4.32	3.32	2.61	2.09	1.70	1.40	1.17	0.98	0.84	0.72	0.62	0.54	0.47	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.18	
			SGN	11.22	7.88	5.74	4.32	3.32	2.61	2.09	1.70	1.40	1.17	0.98	0.84	0.72	0.62	0.54	0.47	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.18	
			SGU L200	8.41	5.91	4.31	3.24	2.49	1.96	1.57	1.28	1.05	0.88	0.74	0.63	0.54	0.47	0.40	0.35	0.31	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	
			SGU L300	5.61	3.94	2.87	2.16	1.66	1.31	1.05	0.85	0.70	0.58	0.49	0.42	0.36	0.31	0.27	0.24	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10	0.09	
			SGN	18.54	14.65	11.87	9.81	8.24	7.02	6.05	5.27	4.64	4.11	3.66	3.29	2.97	2.69	2.45	2.24	2.06	1.90	1.76	1.63	1.51	1.41	1.32	1.23	1.16	
	1.50	100.17	SGU L150	Case	13.46	9.46	6.89	5.18	3.99	3.14	2.51	2.04	1.68	1.40	1.18	1.00	0.86	0.74	0.65	0.57	0.50	0.44	0.39	0.35	0.31	0.28	0.26	0.23	0.21
				SGN	13.46	9.46	6.89	5.18	3.99	3.14	2.51	2.04	1.68	1.40	1.18	1.00	0.86	0.74	0.65	0.57	0.50	0.44	0.39	0.35	0.31	0.28	0.26	0.23	0.21
				SGU L200	10.10	7.0																							




T60_2020		Positive=Negative																									
Number of spans: 1		support: 60 - 60																									
Thickness [Jxcm4]	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00	
0.60	40.07	SGN	4.56	4.06	3.65	3.02	2.54	2.16	1.87	1.63	1.43	1.27	1.13	1.01	0.91	0.83	0.76	0.69	0.64	0.59	0.54	0.50	0.47	0.44	0.41	0.38	0.36
		SGU L150	4.56	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08
		SGU L200	4.04	2.84	2.07	1.55	1.20	0.94	0.75	0.61	0.50	0.42	0.35	0.30	0.26	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.09	0.08	0.07	0.06	0.06
		SGU L300	2.69	1.89	1.38	1.04	0.80	0.63	0.50	0.41	0.34	0.28	0.24	0.20	0.17	0.15	0.13	0.11	0.10	0.09	0.08	0.07	0.06	0.06	0.05	0.04	0.04
0.63	42.07	SGN	5.11	4.54	3.94	3.25	2.73	2.33	2.01	1.75	1.54	1.36	1.21	1.09	0.98	0.89	0.81	0.74	0.68	0.63	0.58	0.54	0.50	0.47	0.44	0.41	0.38
		SGU L150	5.11	3.97	2.90	2.18	1.68	1.32	1.06	0.86	0.71	0.59	0.50	0.42	0.36	0.31	0.27	0.24	0.21	0.19	0.16	0.15	0.13	0.12	0.11	0.10	0.09
		SGU L200	4.24	2.98	2.17	1.63	1.26	0.99	0.79	0.64	0.53	0.44	0.37	0.32	0.27	0.23	0.20	0.18	0.16	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.07
		SGU L300	2.83	1.99	1.45	1.09	0.84	0.66	0.53	0.43	0.35	0.29	0.25	0.21	0.18	0.16	0.14	0.12	0.10	0.09	0.08	0.07	0.07	0.06	0.05	0.05	0.04
0.70	46.75	SGN	6.32	5.62	4.58	3.78	3.18	2.71	2.34	2.03	1.79	1.58	1.41	1.27	1.14	1.04	0.95	0.87	0.79	0.73	0.68	0.63	0.58	0.54	0.51	0.48	0.45
		SGU L150	6.28	4.41	3.22	2.42	1.86	1.46	1.17	0.95	0.79	0.65	0.55	0.47	0.40	0.35	0.30	0.26	0.23	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10
		SGU L200	4.71	3.31	2.41	1.81	1.40	1.10	0.88	0.71	0.59	0.49	0.41	0.35	0.30	0.26	0.22	0.20	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	0.07
		SGU L300	3.14	2.21	1.61	1.21	0.93	0.73	0.59	0.48	0.39	0.33	0.28	0.23	0.20	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.07	0.06	0.05	0.05
0.75	50.09	SGN	7.26	6.18	5.00	4.14	3.48	2.96	2.55	2.22	1.95	1.73	1.54	1.39	1.25	1.13	1.03	0.95	0.87	0.80	0.74	0.69	0.64	0.60	0.56	0.52	0.49
		SGU L150	6.73	4.73	3.45	2.59	1.99	1.57	1.25	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11
		SGU L200	5.05	3.55	2.58	1.94	1.50	1.18	0.94	0.77	0.63	0.53	0.44	0.38	0.32	0.28	0.24	0.21	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08
		SGU L300	3.37	2.36	1.72	1.29	1.00	0.78	0.63	0.51	0.42	0.35	0.30	0.25	0.22	0.19	0.16	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.06	0.05
0.80	53.42	SGN	8.26	6.70	5.42	4.48	3.77	3.21	2.77	2.41	2.12	1.88	1.67	1.50	1.36	1.23	1.12	1.03	0.94	0.87	0.80	0.74	0.69	0.64	0.60	0.56	0.53
		SGU L150	7.18	5.04	3.68	2.76	2.13	1.67	1.34	1.09	0.90	0.75	0.63	0.54	0.46	0.40	0.35	0.30	0.27	0.24	0.21	0.19	0.17	0.15	0.14	0.12	0.11
		SGU L200	5.39	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08
		SGU L300	3.59	2.52	1.84	1.38	1.06	0.84	0.67	0.54	0.45	0.37	0.32	0.27	0.23	0.20	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.06	0.06	0.05
0.88	58.77	SGN	9.55	7.54	6.11	5.05	4.24	3.62	3.12	2.72	2.39	2.11	1.89	1.69	1.53	1.39	1.26	1.16	1.06	0.98	0.90	0.84	0.78	0.73	0.68	0.64	0.60
		SGU L150	7.90	5.55	4.04	3.04	2.34	1.84	1.47	1.20	0.99	0.82	0.69	0.59	0.51	0.44	0.38	0.33	0.29	0.26	0.23	0.21	0.18	0.17	0.15	0.14	0.12
		SGU L200	5.92	4.16	3.03	2.28	1.76	1.38	1.11	0.90	0.74	0.62	0.52	0.44	0.38	0.33	0.28	0.25	0.22	0.19	0.17	0.15	0.14	0.12	0.11	0.10	0.09
		SGU L300	3.95	2.77	2.02	1.52	1.17	0.92	0.74	0.60	0.49	0.41	0.35	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.07	0.06
1.00	66.78	SGN	11.20	8.85	7.17	5.92	4.98	4.24	3.66	3.19	2.80	2.48	2.21	1.99	1.79	1.63	1.48	1.36	1.24	1.15	1.06	0.98	0.91	0.85	0.80	0.75	0.70
		SGU L150	8.98	6.30	4.60	3.45	2.66	2.09	1.67	1.36	1.12	0.94	0.79	0.67	0.57	0.50	0.43	0.38	0.33	0.29	0.26	0.23	0.21	0.19	0.17	0.15	0.14
		SGU L200	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11
		SGU L300	4.49	3.15	2.30	1.73	1.33	1.05	0.84	0.68	0.56	0.47	0.39	0.33	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.10	0.09	0.08	0.07	0.07
1.15	76.80	SGN	13.33	10.53	8.53	7.05	5.93	5.05	4.35	3.79	3.33	2.95	2.63	2.36	2.13	1.93	1.76	1.61	1.48	1.37	1.26	1.17	1.09	1.01	0.95	0.89	0.83
		SGU L150	10.32	7.25	5.28	3.97	3.06	2.41	1.93	1.57	1.29	1.09	0.91	0.77	0.66	0.57	0.50	0.43	0.38	0.34	0.30	0.27	0.24	0.22	0.20	0.18	0.16
		SGU L200	7.74	5.44	3.96	2.98	2.29	1.80	1.44	1.17	0.97	0.81	0.68	0.58	0.50	0.43	0.37	0.33	0.29	0.25	0.23	0.20	0.18	0.16	0.14	0.13	0.12
		SGU L300	5.16	3.62	2.64	1.99	1.53	1.20	0.96	0.78	0.65	0.54	0.45	0.38	0.33	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08
1.25	83.48	SGN	14.79	11.69	9.47	7.82	6.57	5.60	4.83	4.21	3.70	3.28	2.92	2.62	2.37	2.15	1.96	1.79	1.64	1.51	1.40	1.30	1.21	1.13	1.05	0.98	0.92
		SGU L150	11.22	7.88	5.74	4.32	3.32	2.61	2.09	1.70	1.40	1.17	0.98	0.84	0.72	0.62	0.54	0.47	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.18
		SGU L200	8.41	5.91	4.31	3.24	2.49	1.96	1.57	1.28	1.05	0.88	0.74	0.63	0.54	0.47	0.40	0.35	0.31	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13
		SGU L300	5.61	3.94	2.87	2.16	1.66	1.31	1.05	0.85	0.70	0.58	0.49	0.42	0.36	0.31	0.27	0.24	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10	0.09
1.50	100.17	SGN	18.54	14.65	11.87	9.81	8.24	7.02	6.05	5.27	4.64	4.11	3.66	3.29	2.97	2.69	2.45	2.24	2.06	1.90	1.76	1.63	1.51	1.41	1.32	1.23	1.16
		SGU L150	13.46	9.46	6.89	5.18	3.99	3.14	2.51	2.04	1.68	1.40	1.18	1.00	0.86	0.74	0.65	0.57	0.50	0.44	0.39	0.35	0.31	0.28	0.26	0.23	0.21
		SGU L200	10.10	7.09	5.17	3.88	2.99	2.35	1.88	1.53	1.26	1.05	0.89	0.75	0.65	0.56	0.49	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.17	0.16
		SGU L300	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11
Number of spans: 2		support: 60 - 300 - 60																									
Thickness [Jxcm4]		Case																									
0.60	40.07	SGN	4.77	3.93	3.29	2.80	2.41	2.10	1.85	1.63	1.43	1.27	1.13	1.01	0.91	0.83	0.76	0.69	0.64	0.59	0.54	0.50	0.47	0.44	0.41	0.38	0.36
		SGU L150	4.77	3.93	3.29	2.80	2.41	2.10	1.85	1.63	1.43	1.27	1.13	1.01	0.91	0.83	0.76	0.69	0.64	0.59	0.54	0.50	0.47	0.44	0.41	0.38	0.36
		SGU L200	4.77	3.93	3.29	2.80	2.41	2.10	1.85	1.63	1.43	1.27	1.13	1.01	0.91	0.83	0.76	0.69	0.64	0.59	0.54	0.50	0.47	0.44	0.41	0.38	0.36
		SGU L300	4.77	3.93	3.29	2.80	2.41	2.10	1.85	1.63	1.43	1.27	1.13	1.01	0.91	0.83	0.76	0.69	0.64	0.59	0.54	0.50	0.47	0.44	0.41	0.38	0.36
0.63	42.07	SGN	5.18	4.26	3.57	3.04	2.62	2.28	2.00	1.75	1.54	1.36	1.21	1.09	0.98	0.89	0.81	0.74	0.68	0.63	0.58	0.54	0.50	0.47	0.44	0.41	0.38
		SGU L150	5.18	4.26	3.57	3.04	2.62	2.28	2.00	1.75	1.54	1.36	1.21	1.09	0.98	0.89	0.81	0.74	0.68	0.63	0.58	0.54	0.50	0.47	0.44	0.41	0.38
		SGU L200	5.18	4.26	3.57	3.04	2.62	2.28	2.00	1.75	1.54	1.36	1.21	1.09	0.98	0.89	0.81	0.74	0.68	0.63	0.58	0.54	0.50	0.47	0		



T60_320		Positive-Negative		support: 60 - 60																											
Number of spans: 1		Case		support: 60 - 60																											
Thickness	Jx[cm ⁴]																														
0.60	40.07	SGN	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00				
		SGU L150	4.88	4.34	3.90	3.35	2.82	2.40	2.07	1.80	1.59	1.40	1.25	1.12	1.01	0.92	0.84	0.77	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.42	0.40				
		SGU L200	4.04	2.84	2.07	1.55	1.20	0.94	0.75	0.61	0.50	0.42	0.35	0.30	0.26	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06				
0.63	42.07	SGN	5.47	4.86	4.37	3.61	3.04	2.59	2.23	1.94	1.71	1.51	1.35	1.21	1.09	0.99	0.90	0.83	0.76	0.70	0.65	0.60	0.56	0.52	0.49	0.45	0.43				
		SGU L150	4.47	3.97	2.90	2.18	1.68	1.32	1.06	0.86	0.71	0.59	0.50	0.42	0.36	0.31	0.27	0.24	0.21	0.19	0.16	0.15	0.13	0.12	0.11	0.10	0.09				
		SGU L200	5.24	2.98	2.17	1.63	1.26	0.99	0.79	0.64	0.53	0.44	0.37	0.32	0.27	0.23	0.20	0.18	0.16	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.07				
0.70	46.75	SGN	6.76	6.01	5.12	4.23	3.56	3.03	2.61	2.28	2.00	1.77	1.58	1.42	1.28	1.16	1.06	0.97	0.89	0.82	0.76	0.70	0.65	0.61	0.57	0.53	0.50				
		SGU L150	6.28	4.41	3.22	2.42	1.86	1.46	1.17	0.95	0.79	0.65	0.55	0.47	0.40	0.35	0.30	0.26	0.23	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10				
		SGU L200	4.71	3.31	2.41	1.81	1.40	1.10	0.88	0.71	0.59	0.49	0.41	0.35	0.30	0.26	0.23	0.20	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	0.07				
0.75	50.09	SGN	7.76	6.90	5.64	4.66	3.91	3.33	2.88	2.50	2.20	1.95	1.74	1.56	1.41	1.28	1.16	1.07	0.98	0.90	0.83	0.77	0.72	0.67	0.63	0.59	0.55				
		SGU L150	6.73	4.73	3.45	2.59	1.99	1.57	1.25	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11				
		SGU L200	5.05	3.55	2.58	1.94	1.50	1.18	0.94	0.77	0.63	0.53	0.44	0.38	0.32	0.28	0.24	0.21	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08				
0.80	53.42	SGN	8.83	7.55	6.11	5.05	4.24	3.62	3.12	2.72	2.39	2.11	1.89	1.69	1.53	1.39	1.26	1.16	1.06	0.98	0.90	0.84	0.78	0.73	0.68	0.64	0.60				
		SGU L150	7.18	5.04	3.68	2.76	2.13	1.67	1.34	1.09	0.90	0.75	0.63	0.54	0.46	0.40	0.35	0.30	0.27	0.24	0.21	0.19	0.17	0.15	0.14	0.12	0.11				
		SGU L200	5.39	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08				
0.88	58.77	SGN	10.67	8.51	6.89	5.70	4.79	4.08	3.52	3.06	2.69	2.38	2.13	1.91	1.72	1.56	1.42	1.30	1.20	1.10	1.02	0.95	0.88	0.82	0.77	0.72	0.67				
		SGU L150	7.90	5.55	4.04	3.04	2.34	1.84	1.47	1.20	0.99	0.82	0.69	0.59	0.51	0.44	0.38	0.33	0.29	0.26	0.23	0.21	0.19	0.17	0.15	0.14	0.12				
		SGU L200	5.92	4.16	3.03	2.28	1.76	1.38	1.11	0.90	0.74	0.62	0.52	0.44	0.38	0.33	0.28	0.25	0.22	0.19	0.17	0.15	0.14	0.12	0.11	0.10	0.09				
1.00	66.78	SGN	12.65	10.00	8.10	6.69	5.62	4.79	4.13	3.60	3.16	2.80	2.54	2.24	2.02	1.84	1.67	1.53	1.41	1.30	1.20	1.11	1.03	0.96	0.90	0.84	0.79				
		SGU L150	8.98	6.30	4.60	3.45	2.66	2.09	1.67	1.36	1.12	0.94	0.79	0.67	0.57	0.50	0.43	0.38	0.33	0.29	0.26	0.23	0.21	0.19	0.17	0.15	0.14				
		SGU L200	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11				
1.15	76.80	SGN	15.09	11.92	9.66	7.98	6.71	5.71	4.93	4.29	3.77	3.34	2.98	2.67	2.41	2.19	2.00	1.83	1.68	1.55	1.43	1.32	1.23	1.15	1.07	1.00	0.94				
		SGU L150	10.32	7.25	5.28	3.97	3.06	2.41	1.93	1.57	1.29	1.08	0.91	0.77	0.66	0.57	0.50	0.43	0.38	0.34	0.30	0.27	0.24	0.22	0.20	0.18	0.16				
		SGU L200	7.74	5.44	3.96	2.99	2.23	1.80	1.44	1.17	0.97	0.81	0.68	0.58	0.50	0.43	0.37	0.33	0.29	0.25	0.22	0.19	0.17	0.15	0.13	0.12	0.11				
1.25	83.48	SGN	16.75	13.24	10.72	8.86	7.45	6.34	5.47	4.77	4.19	3.71	3.31	2.97	2.68	2.43	2.22	2.03	1.86	1.72	1.59	1.47	1.37	1.27	1.19	1.12	1.05				
		SGU L150	11.22	7.88	5.74	4.32	3.32	2.61	2.09	1.70	1.40	1.17	0.98	0.84	0.72	0.62	0.54	0.47	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.18				
		SGU L200	8.41	5.91	4.31	3.24	2.49	1.96	1.57	1.28	1.05	0.88	0.74	0.63	0.54	0.47	0.40	0.35	0.31	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13				
1.50	100.17	SGN	21.05	16.63	13.47	11.13	9.35	7.97	6.87	5.99	5.26	4.66	4.16	3.73	3.37	3.05	2.78	2.55	2.34	2.16	1.99	1.85	1.72	1.60	1.50	1.40	1.32				
		SGU L150	13.46	9.46	6.89	5.18	3.99	3.14	2.51	2.04	1.68	1.40	1.18	1.00	0.86	0.74	0.65	0.57	0.50	0.44	0.39	0.35	0.31	0.28	0.26	0.23	0.21				
		SGU L200	10.10	7.09	5.17	3.88	2.99	2.35	1.88	1.53	1.26	1.05	0.89	0.75	0.65	0.56	0.49	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.17	0.16				
Number of spans: 2	support: 60 - 60 - 60	Thickness	Jx[cm ⁴]	Case																											
					support: 60 - 60 - 60																										
0.60	40.07	SGN	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00				
		SGU L150	4.07	3.40	2.90	2.50	2.18	1.92	1.70	1.52	1.36	1.23	1.11	1.01	0.93	0.85	0.79	0.73	0.68	0.63	0.59	0.55	0.51	0.48	0.45	0.42	0.40				
		SGU L200	4.07	3.40	2.90	2.50	2.18	1.92	1.70	1.52	1.36	1.23	1.11	1.01	0.93	0.85	0.79	0.73	0.68	0.63	0.59	0.55	0.51	0.48	0.45	0.42	0.40				
0.63	42.07	SGN	4.47	3.40	2.90	2.49	1.92	1.51	1.21	0.98	0.81	0.67	0.57	0.48	0.41	0.36	0.31	0.27	0.24	0.21	0.19	0.17	0.15	0.14	0.12	0.11	0.10				
		SGU L150	4.45	3.72	3.16	2.73	2.37	2.09	1.85	1.65	1.48	1.34	1.21	1.10	1.01	0.93	0.85	0.79	0.73	0.68	0.64	0.59	0.55	0.52	0.49	0.45	0.43				
		SGU L200	4.45	3.72	3.16	2.73	2.37	2.09	1.85	1.65	1.48	1.34	1.21	1.10	1.01	0.93	0.85	0.79	0.73	0.68	0.64	0.59	0.55	0.52	0.49	0.45	0.43				
0.70	46.75	SGN	5.31	4.44	3.77	3.24	2.83	2.49	2.20	1.96	1.76	1.58	1.44	1.31	1.20	1.10	1.01	0.93	0.87	0.81	0.75	0.70	0.65	0.61	0.57	0.53	0.50				
		SGU L150	5.31	4.44	3.77	3.24	2.83	2.49	2.20	1.96	1.76	1.57	1.33	1.13	0.97	0.84	0.73	0.64	0.56	0.50	0.44	0.39	0.35	0.32	0.29	0.26	0.24				
		SGU L200	5.31	4.44	3.77	3.24	2.83	2.49	2.21	1.72	1.42	1.18	0.99	0.85	0.73	0.63	0.54	0.48	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.18				
0.75	50.09	SGN	5.94	4.96	4.21	3.62	3.15	2.77	2.45	2.18	1.95	1.76	1.60	1.45	1.33	1.22	1.12	1.04	0.96	0.89	0.83	0.77	0.72	0.67	0.63	0.59	0.55				
		SGU L150	5.94	4.96	4.21	3.62	3.15	2.77	2.45	2.18	1.95	1.69	1.42	1.21	1.04	0.90	0.78	0.68	0.60	0.53	0.47	0.42	0.38	0.34	0.31	0.28	0.25				
		SGU L200	5.94	4.96	4.21	3.62	3.15	2.77	2.27	1.84	1.52	1.27	1.07	0.91	0.78	0.67	0.58	0.51	0.45	0.40	0.35	0.32	0.28	0.25	0.23	0.21	0.19				
0.80	53.42	SGN	6.55	5.47	4.64	3.99	3.47	3.04	2.69	2.39	2.14	1.93	1.75	1.59	1.45	1.33	1.23	1.13	1.05	0.98	0.90	0.84	0.78	0.73	0.68	0.64	0.60				
		SGU L150	6.55	5.47	4.64	3.99	3.47	3.04	2.69	2.39	2.14	1.80	1.52	1.29	1.11	0.95	0.83	0.73	0.64	0.57	0.50	0.45	0.40	0.36	0.33	0.30	0.27				
		SGU L200	6.55	5.47	4.64	3.99	3.47	3.02	2.42	1.96	1.62	1.35	1.14	0.97	0.83	0.72	0.62	0.55	0.48	0.42	0.38	0.34	0.30	0.27	0.25	0.22	0.20				
0.88	58.77	SGN	7.57	6.31	5.34	4.59	3.98	3.50	3.09	2.75	2.46	2.21	2.00	1.82	1.66	1.52	1.40	1.30	1.20	1.10	1.02	0.95	0.88	0.82	0.77	0.72	0.67				
		SGU L150	7.57	6.31	5.34	4.59	3.98	3.50	3.09	2.75	2.37	1.98	1.67	1.42	1.22	1.05	0.91	0.80	0.70	0.62	0.55	0.49	0.44	0.40	0.36	0.33	0.30				
		SGU L200	7.57	6.31	5.3																										



T60_320		Positive=Negative																											
Number of spans: 1		support: 60 - 60																											
Thickness	Jx[cm ⁴]	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00		
0.60	40.07	SGN	4.88	4.34	3.90	3.35	2.82	2.40	2.07	1.80	1.59	1.40	1.25	1.12	1.01	0.92	0.84	0.77	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.42	0.40	0.38	0.37
		SGU L150	4.88	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08	0.07	0.06
		SGU L300	4.04	2.84	2.07	1.55	1.20	0.94	0.75	0.61	0.50	0.42	0.35	0.30	0.26	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.05	0.04
0.63	42.07	SGN	5.47	4.86	4.37	3.61	3.04	2.59	2.23	1.94	1.71	1.51	1.35	1.21	1.09	0.99	0.90	0.83	0.76	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.43	0.41	0.39
		SGU L150	5.47	3.97	2.90	2.18	1.68	1.32	1.06	0.86	0.71	0.59	0.50	0.42	0.36	0.31	0.27	0.24	0.21	0.19	0.16	0.15	0.13	0.12	0.11	0.10	0.09	0.08	
		SGU L300	4.24	2.98	2.17	1.63	1.26	0.99	0.79	0.64	0.53	0.44	0.37	0.32	0.27	0.23	0.20	0.18	0.16	0.14	0.12	0.10	0.09	0.08	0.07	0.06	0.05	0.04	
0.70	46.75	SGN	6.76	6.01	5.12	4.23	3.56	3.03	2.61	2.28	2.00	1.77	1.58	1.42	1.28	1.16	1.06	0.97	0.89	0.82	0.76	0.70	0.65	0.61	0.57	0.53	0.50	0.48	
		SGU L150	6.28	4.41	3.22	2.42	1.86	1.46	1.17	0.95	0.79	0.65	0.55	0.47	0.40	0.35	0.30	0.26	0.23	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10		
		SGU L300	4.71	3.31	2.41	1.81	1.40	1.10	0.88	0.71	0.59	0.49	0.41	0.35	0.30	0.26	0.23	0.20	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	0.07		
0.75	50.09	SGN	7.76	6.90	5.64	4.66	3.91	3.33	2.88	2.50	2.20	1.95	1.74	1.56	1.41	1.28	1.16	1.07	0.98	0.90	0.83	0.77	0.72	0.67	0.63	0.59	0.55	0.52	
		SGU L150	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11		
		SGU L300	5.05	3.55	2.58	1.94	1.50	1.18	0.94	0.77	0.63	0.53	0.44	0.38	0.32	0.28	0.24	0.21	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08		
0.80	53.42	SGN	8.83	7.55	6.11	5.05	4.24	3.62	3.12	2.72	2.39	2.11	1.89	1.69	1.53	1.39	1.26	1.16	1.06	0.98	0.90	0.84	0.78	0.73	0.68	0.64	0.60	0.56	
		SGU L150	7.18	5.04	3.68	2.76	2.13	1.67	1.34	1.09	0.90	0.75	0.63	0.54	0.46	0.40	0.35	0.30	0.27	0.24	0.21	0.19	0.17	0.15	0.14	0.12	0.11		
		SGU L300	5.39	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08		
0.88	58.77	SGN	10.67	8.51	6.89	5.70	4.79	4.08	3.52	3.06	2.69	2.38	2.13	1.91	1.72	1.56	1.42	1.30	1.20	1.10	1.02	0.95	0.88	0.82	0.77	0.72	0.67		
		SGU L150	9.00	5.55	4.04	3.04	2.34	1.84	1.47	1.20	0.99	0.82	0.69	0.59	0.51	0.44	0.38	0.33	0.29	0.26	0.23	0.21	0.18	0.17	0.15	0.14	0.12		
		SGU L300	5.92	4.16	3.03	2.28	1.78	1.38	1.11	0.90	0.74	0.62	0.52	0.44	0.38	0.33	0.28	0.25	0.22	0.19	0.17	0.15	0.14	0.12	0.11	0.10	0.09		
1.00	66.78	SGN	12.65	10.00	8.10	6.69	5.62	4.79	4.13	3.60	3.16	2.80	2.50	2.24	2.02	1.84	1.67	1.53	1.41	1.30	1.20	1.11	1.03	0.96	0.90	0.84	0.79		
		SGU L150	8.98	6.30	4.60	3.45	2.66	2.09	1.67	1.36	1.12	0.94	0.79	0.67	0.57	0.50	0.43	0.38	0.33	0.29	0.26	0.23	0.21	0.19	0.17	0.15	0.14		
		SGU L300	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11		
1.15	76.80	SGN	15.09	11.92	9.66	7.98	6.71	5.71	4.93	4.29	3.77	3.34	2.98	2.67	2.41	2.19	2.00	1.83	1.68	1.55	1.43	1.32	1.23	1.15	1.07	1.00	0.94		
		SGU L150	10.32	7.25	5.28	3.97	3.06	2.41	1.93	1.57	1.29	1.08	0.91	0.77	0.66	0.57	0.50	0.43	0.38	0.34	0.30	0.27	0.24	0.22	0.20	0.18	0.16		
		SGU L300	7.74	5.44	3.96	2.98	2.29	1.80	1.44	1.17	0.97	0.81	0.68	0.58	0.50	0.43	0.37	0.33	0.29	0.25	0.23	0.20	0.18	0.16	0.15	0.13	0.12		
1.25	83.48	SGN	16.75	13.24	10.72	8.86	7.45	6.34	5.47	4.77	4.19	3.71	3.31	2.97	2.68	2.43	2.22	2.03	1.86	1.72	1.59	1.47	1.37	1.27	1.19	1.12	1.05		
		SGU L150	11.22	7.88	5.74	4.32	3.32	2.61	2.09	1.70	1.40	1.17	0.98	0.84	0.72	0.62	0.54	0.47	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.18		
		SGU L300	8.41	5.91	4.31	3.24	2.49	1.96	1.57	1.28	1.05	0.88	0.74	0.63	0.54	0.47	0.40	0.35	0.31	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13		
1.50	100.17	SGN	21.05	16.63	13.47	11.13	9.35	7.97	6.87	5.99	5.26	4.66	4.16	3.73	3.37	3.05	2.78	2.55	2.34	2.16	1.99	1.85	1.72	1.60	1.50	1.40	1.32		
		SGU L150	13.46	9.46	6.89	5.18	3.99	3.14	2.51	2.04	1.68	1.40	1.18	1.00	0.86	0.74	0.65	0.57	0.50	0.44	0.39	0.35	0.31	0.28	0.26	0.23	0.21		
		SGU L300	10.10	7.09	5.17	3.88	2.99	2.35	1.88	1.53	1.26	1.05	0.89	0.75	0.65	0.56	0.49	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.17	0.16		
Number of spans: 2		support: 60 - 60 - 60																											
Thickness	Jx[cm ⁴]	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00		
0.60	40.07	SGN	4.27	3.57	3.03	2.60	2.27	1.99	1.76	1.57	1.41	1.27	1.15	1.05	0.96	0.88	0.81	0.75	0.69	0.64	0.60	0.56	0.52	0.48	0.45	0.42	0.40		
		SGU L150	4.27	3.57	3.03	2.60	2.27	1.99	1.76	1.57	1.41	1.27	1.14	0.97	0.83	0.72	0.62	0.55	0.48	0.42	0.38	0.34	0.30	0.27	0.25	0.22	0.20		
		SGU L300	4.27	3.57	3.03	2.60	2.27	1.99	1.76	1.57	1.41	1.27	1.10	0.85	0.73	0.62	0.54	0.47	0.41	0.36	0.32	0.28	0.25	0.23	0.20	0.18	0.17		
0.63	42.07	SGN	4.67	3.89	3.30	2.84	2.47	2.17	1.92	1.71	1.53	1.38	1.25	1.13	1.04	0.95	0.88	0.81	0.75	0.70	0.65	0.60	0.56	0.52	0.49	0.45	0.43		
		SGU L150	4.67	3.89	3.30	2.84	2.47	2.17	1.92	1.71	1.53	1.38	1.19	1.02	0.87	0.75	0.65	0.57	0.50	0.45	0.40	0.35	0.32	0.29	0.26	0.23	0.21		
		SGU L300	4.67	3.89	3.30	2.84	2.47	2.17	1.90	1.55	1.27	1.06	0.90	0.76	0.65	0.56	0.49	0.43	0.38	0.33	0.30	0.27	0.24	0.21	0.19	0.18			
0.70	46.75	SGN	5.56	4.63	3.93	3.37	2.93	2.57	2.28	2.02	1.81	1.63	1.48	1.34	1.23	1.13	1.04	0.96	0.89	0.82	0.76	0.70	0.65	0.61	0.57	0.53	0.50		
		SGU L150	5.56	4.63	3.93	3.37	2.93	2.57	2.28	2.02	1.81	1.57	1.33	1.13	0.97	0.84	0.73	0.64	0.56	0.50	0.44	0.39	0.35	0.32	0.29	0.26	0.24		
		SGU L300	5.56	4.63	3.93	3.37	2.93	2.57	2.11	1.72	1.42	1.18	0.99	0.85	0.73	0.63	0.54	0.48	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19			
0.75	50.09	SGN	6.21	5.17	4.38	3.76	3.27	2.86	2.53	2.25	2.01	1.81	1.64	1.49	1.36	1.25	1.15	1.06	0.98	0.90	0.83	0.77	0.72	0.67	0.63	0.59	0.55		
		SGU L150	6.21	5.17	4.38	3.76	3.27	2.86	2.53	2.25	2.01	1.69	1.42	1.21	1.04	0.90	0.78	0.68	0.60	0.53	0.47	0.42	0.38	0.34	0.31	0.28	0.25		
		SGU L300	6.2																										



T60_320		Positive=Negative																											
Number of spans: 1		support: 60 - 60																											
Thickness	Jx[cm ⁴]	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00		
0.60	40.07	SGN	4.88	4.34	3.90	3.35	2.82	2.40	2.07	1.80	1.59	1.40	1.25	1.12	1.01	0.92	0.84	0.77	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.42	0.40	0.38	0.37
		SGU L/150	4.88	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08	0.07	0.06
		SGU L/300	4.04	2.84	2.07	1.55	1.20	0.94	0.75	0.61	0.50	0.42	0.35	0.30	0.26	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.05	0.04
0.63	42.07	SGN	5.47	4.86	4.37	3.61	3.04	2.59	2.23	1.94	1.71	1.51	1.35	1.21	1.09	0.99	0.90	0.83	0.76	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.43	0.41	0.39
		SGU L/150	5.47	3.97	2.90	2.18	1.68	1.32	1.06	0.86	0.71	0.59	0.50	0.42	0.36	0.31	0.27	0.24	0.21	0.19	0.16	0.15	0.13	0.12	0.11	0.10	0.09	0.08	
		SGU L/300	4.24	2.98	2.17	1.63	1.26	0.99	0.79	0.64	0.53	0.44	0.37	0.32	0.27	0.23	0.20	0.18	0.16	0.14	0.12	0.10	0.09	0.08	0.07	0.06	0.05	0.04	
0.70	46.75	SGN	6.76	6.01	5.12	4.23	3.56	3.03	2.61	2.28	2.00	1.77	1.58	1.42	1.28	1.16	1.06	0.97	0.89	0.82	0.76	0.70	0.65	0.61	0.57	0.53	0.50	0.48	0.46
		SGU L/150	6.28	4.41	3.22	2.42	1.86	1.46	1.17	0.95	0.79	0.65	0.55	0.47	0.40	0.35	0.30	0.26	0.23	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10	0.09	
		SGU L/300	4.71	3.31	2.41	1.81	1.40	1.10	0.88	0.71	0.59	0.49	0.41	0.35	0.30	0.26	0.23	0.20	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	0.07		
0.75	50.09	SGN	7.76	6.90	5.64	4.66	3.91	3.33	2.88	2.50	2.20	1.95	1.74	1.56	1.41	1.28	1.16	1.07	0.98	0.90	0.83	0.77	0.72	0.67	0.63	0.59	0.55	0.52	0.50
		SGU L/150	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11		
		SGU L/300	5.05	3.55	2.58	1.94	1.50	1.18	0.94	0.77	0.63	0.53	0.44	0.38	0.32	0.28	0.24	0.21	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08		
0.80	53.42	SGN	8.83	7.55	6.11	5.05	4.24	3.62	3.12	2.72	2.39	2.11	1.89	1.69	1.53	1.39	1.26	1.16	1.06	0.98	0.90	0.84	0.78	0.73	0.68	0.64	0.60	0.57	0.55
		SGU L/150	7.18	5.04	3.68	2.76	2.13	1.67	1.34	1.09	0.90	0.75	0.63	0.54	0.46	0.40	0.35	0.30	0.27	0.24	0.21	0.19	0.17	0.15	0.14	0.12	0.11		
		SGU L/300	5.39	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08		
0.88	58.77	SGN	10.67	8.51	6.89	5.70	4.79	4.08	3.52	3.06	2.69	2.38	2.13	1.91	1.72	1.56	1.42	1.30	1.20	1.10	1.02	0.95	0.88	0.82	0.77	0.72	0.67	0.62	
		SGU L/150	9.00	5.55	4.04	3.04	2.34	1.84	1.47	1.20	0.99	0.82	0.69	0.59	0.51	0.44	0.38	0.33	0.29	0.26	0.23	0.21	0.18	0.17	0.15	0.14	0.12		
		SGU L/300	5.92	4.16	3.03	2.28	1.78	1.38	1.11	0.90	0.74	0.62	0.52	0.44	0.38	0.33	0.28	0.25	0.22	0.19	0.17	0.15	0.14	0.12	0.11	0.10			
1.00	66.78	SGN	12.65	10.00	8.10	6.69	5.62	4.79	4.13	3.60	3.16	2.80	2.50	2.24	2.02	1.84	1.67	1.53	1.41	1.30	1.20	1.11	1.03	0.96	0.90	0.84	0.79	0.74	0.69
		SGU L/150	8.98	6.30	4.60	3.45	2.66	2.09	1.67	1.36	1.12	0.94	0.79	0.67	0.57	0.50	0.43	0.38	0.33	0.29	0.26	0.23	0.21	0.19	0.17	0.15	0.14		
		SGU L/300	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11		
1.15	76.80	SGN	15.09	11.92	9.66	7.98	6.71	5.71	4.93	4.29	3.77	3.34	2.98	2.67	2.41	2.19	2.00	1.83	1.68	1.55	1.43	1.32	1.23	1.15	1.07	1.00	0.94	0.89	0.84
		SGU L/150	10.32	7.25	5.28	3.97	3.06	2.41	1.93	1.57	1.29	1.08	0.91	0.77	0.66	0.57	0.50	0.43	0.38	0.34	0.30	0.27	0.24	0.22	0.20	0.18	0.16		
		SGU L/300	7.74	5.44	3.96	2.98	2.29	1.80	1.44	1.17	0.97	0.81	0.68	0.58	0.50	0.43	0.37	0.33	0.29	0.25	0.23	0.20	0.18	0.16	0.15	0.13	0.12		
1.25	83.48	SGN	16.75	13.24	10.72	8.86	7.45	6.34	5.47	4.77	4.19	3.71	3.31	2.97	2.68	2.43	2.22	2.03	1.86	1.72	1.59	1.47	1.37	1.27	1.19	1.12	1.05	0.99	0.94
		SGU L/150	11.22	7.88	5.74	4.32	3.32	2.61	2.09	1.70	1.40	1.17	0.98	0.84	0.72	0.62	0.54	0.47	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.18		
		SGU L/300	8.41	5.91	4.31	3.24	2.49	1.96	1.57	1.28	1.05	0.88	0.74	0.63	0.54	0.47	0.40	0.35	0.31	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13		
1.50	100.17	SGN	21.05	16.63	13.47	11.13	9.35	7.97	6.87	5.99	5.26	4.66	4.16	3.73	3.37	3.05	2.78	2.55	2.34	2.16	1.99	1.85	1.72	1.60	1.50	1.40	1.32	1.24	1.16
		SGU L/150	13.46	9.46	6.89	5.18	3.99	3.14	2.51	2.04	1.68	1.40	1.18	1.00	0.86	0.74	0.65	0.57	0.50	0.44	0.39	0.35	0.31	0.28	0.26	0.23	0.21	0.19	
		SGU L/300	10.10	7.09	5.17	3.88	2.99	2.35	1.88	1.53	1.26	1.05	0.89	0.75	0.65	0.56	0.49	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.17	0.16		
Number of spans: 2		support: 60 - 120 - 60																											
Thickness	Jx[cm ⁴]	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00		
0.60	40.07	SGN	4.57	3.80	3.21	2.75	2.39	2.09	1.85	1.64	1.47	1.32	1.19	1.09	0.99	0.91	0.84	0.77	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.42	0.40	0.38	
		SGU L/150	4.57	3.80	3.21	2.75	2.39	2.09	1.85	1.64	1.47	1.32	1.14	0.97	0.83	0.72	0.62	0.55	0.48	0.42	0.38	0.34	0.30	0.27	0.25	0.22	0.20		
		SGU L/300	4.57	3.80	3.21	2.75	2.39	2.09	1.81	1.47	1.21	1.01	0.85	0.73	0.62	0.54	0.47	0.41	0.36	0.32	0.28	0.25	0.23	0.20	0.18	0.17	0.15		
0.63	42.07	SGN	4.98	4.14	3.50	3.00	2.60	2.28	2.01	1.78	1.59	1.43	1.30	1.18	1.07	0.98	0.90	0.83	0.76	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.43	0.41	
		SGU L/150	4.98	4.14	3.50	3.00	2.60	2.28	2.01	1.78	1.59	1.42	1.19	1.02	0.87	0.75	0.65	0.57	0.50	0.45	0.40	0.35	0.32	0.29	0.26	0.23	0.21		
		SGU L/300	4.98	4.14	3.50	3.00	2.60	2.28	1.90	1.55	1.27	1.06	0.90	0.76	0.65	0.56	0.49	0.43	0.38	0.33	0.30	0.27	0.24	0.21	0.19	0.18	0.16		
0.70	46.75	SGN	5.92	4.91	4.15	3.55	3.08	2.70	2.38	2.11	1.89	1.70	1.53	1.39	1.27	1.16	1.06	0.97	0.89	0.82	0.76	0.70	0.65	0.61	0.57	0.53	0.50		
		SGU L/150	5.92	4.91	4.15	3.55	3.08	2.70	2.38	2.11	1.89	1.57	1.33	1.13	0.97	0.84	0.73	0.64	0.56	0.50	0.44	0.39	0.35	0.32	0.29	0.26	0.24		
		SGU L/300	5.92	4.91	4.15	3.55	3.08	2.64	2.11	1.72	1.42	1.18	0.99	0.85	0.73	0.63	0.54	0.48	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.18		
0.75	50.09	SGN	6.60	5.48	4.62	3.96	3.43	3.00	2.64	2.34	2.09	1.88	1.70	1.54	1.41	1.28	1.16	1.07	0.98	0.90	0.83	0.77	0.72	0.67	0.63	0.59	0.55		
		SGU L/150	6.60	5.48	4.62	3.96	3.43	3.00	2.64	2.																			

T60_320		Positive=Negative																									
Number of spans: 1	Thickness Jx[cm ⁴]	Case	support: 60 - 60																								
			2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00
0.60	40.07	SGN	4.88	4.34	3.90	3.35	2.82	2.40	2.07	1.80	1.59	1.40	1.25	1.12	1.01	0.92	0.84	0.77	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.42	0.40
		SGU L150	4.88	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08
		SGU L300	4.04	2.84	2.07	1.55	1.20	0.94	0.75	0.61	0.50	0.42	0.35	0.30	0.26	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.09	0.08	0.07	0.06	0.05
0.63	42.07	SGN	5.47	4.86	4.37	3.61	3.04	2.59	2.23	1.94	1.71	1.51	1.35	1.21	1.09	0.99	0.90	0.83	0.76	0.70	0.65	0.60	0.56	0.52	0.49	0.45	0.43
		SGU L150	5.47	3.97	2.90	2.18	1.68	1.32	1.06	0.86	0.71	0.59	0.50	0.42	0.36	0.31	0.27	0.24	0.21	0.19	0.16	0.15	0.13	0.12	0.11	0.10	0.09
		SGU L300	4.24	2.98	2.17	1.63	1.26	0.99	0.79	0.64	0.53	0.44	0.37	0.32	0.27	0.23	0.20	0.18	0.16	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.06
0.70	46.75	SGN	2.83	2.99	1.45	1.09	0.84	0.66	0.53	0.43	0.35	0.29	0.25	0.21	0.18	0.16	0.14	0.12	0.10	0.09	0.08	0.07	0.07	0.06	0.05	0.04	0.04
		SGU L150	6.76	6.01	5.12	4.23	3.56	3.03	2.61	2.28	2.00	1.77	1.58	1.42	1.28	1.16	1.06	0.97	0.89	0.82	0.76	0.70	0.65	0.61	0.57	0.53	0.50
		SGU L300	6.28	4.41	3.22	2.42	1.86	1.46	1.17	0.95	0.79	0.65	0.55	0.47	0.40	0.35	0.30	0.26	0.23	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10
0.75	50.09	SGN	7.76	6.90	5.64	4.66	3.91	3.33	2.88	2.50	2.20	1.95	1.74	1.56	1.41	1.28	1.16	1.07	0.98	0.90	0.83	0.77	0.72	0.67	0.63	0.59	0.55
		SGU L150	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11
		SGU L300	5.05	3.55	2.58	1.94	1.50	1.18	0.94	0.77	0.63	0.53	0.44	0.38	0.32	0.28	0.24	0.21	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08
0.80	53.42	SGN	3.37	2.36	1.72	1.29	1.00	0.78	0.63	0.51	0.42	0.35	0.30	0.25	0.22	0.19	0.16	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.05	0.05
		SGU L150	8.83	7.55	6.11	5.05	4.24	3.62	3.12	2.72	2.39	2.11	1.89	1.69	1.53	1.39	1.26	1.16	1.06	0.98	0.90	0.84	0.78	0.73	0.68	0.64	0.60
		SGU L300	5.39	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08
0.88	58.77	SGN	10.67	8.51	6.89	5.70	4.79	4.08	3.52	3.06	2.69	2.38	2.13	1.91	1.72	1.56	1.42	1.30	1.20	1.10	1.02	0.95	0.88	0.82	0.77	0.72	0.67
		SGU L150	7.90	5.55	4.04	3.04	2.34	1.84	1.47	1.20	0.99	0.82	0.69	0.59	0.51	0.44	0.38	0.33	0.29	0.26	0.23	0.21	0.18	0.17	0.15	0.14	0.12
		SGU L300	5.92	4.16	3.03	2.28	1.76	1.38	1.11	0.90	0.74	0.62	0.52	0.44	0.38	0.33	0.28	0.25	0.22	0.19	0.17	0.15	0.14	0.12	0.11	0.10	0.09
1.00	66.78	SGN	12.65	10.00	8.10	6.69	5.62	4.79	4.13	3.60	3.18	2.80	2.50	2.24	2.02	1.84	1.67	1.53	1.41	1.30	1.20	1.11	1.03	0.96	0.90	0.84	0.78
		SGU L150	8.98	6.30	4.60	3.45	2.66	2.09	1.67	1.36	1.12	0.94	0.79	0.67	0.57	0.50	0.43	0.38	0.33	0.29	0.26	0.23	0.21	0.19	0.17	0.15	0.14
		SGU L300	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11
1.15	76.80	SGN	15.09	11.92	9.66	7.98	6.71	5.71	4.93	4.29	3.77	3.34	2.98	2.67	2.41	2.19	2.00	1.83	1.68	1.55	1.43	1.32	1.23	1.15	1.07	1.00	0.94
		SGU L150	10.32	7.25	5.28	3.97	3.06	2.41	1.93	1.57	1.29	1.08	0.91	0.77	0.66	0.57	0.50	0.43	0.38	0.34	0.30	0.27	0.24	0.22	0.20	0.18	0.16
		SGU L300	7.74	5.44	3.96	2.98	2.29	1.80	1.44	1.17	0.97	0.81	0.68	0.58	0.50	0.43	0.37	0.33	0.29	0.25	0.23	0.20	0.18	0.16	0.15	0.13	0.12
1.25	83.48	SGN	16.16	13.24	10.72	8.86	7.45	6.34	5.47	4.77	4.19	3.71	3.31	2.97	2.68	2.43	2.22	2.03	1.86	1.72	1.59	1.47	1.37	1.27	1.19	1.12	1.05
		SGU L150	11.22	7.88	5.74	4.32	3.32	2.61	2.09	1.70	1.40	1.17	0.98	0.84	0.72	0.62	0.54	0.47	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.18
		SGU L300	8.41	5.91	4.31	3.24	2.49	1.96	1.57	1.28	1.05	0.88	0.74	0.63	0.54	0.47	0.40	0.35	0.31	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13
1.50	100.17	SGN	21.05	16.63	13.47	11.13	9.35	7.97	6.87	5.99	5.26	4.66	4.16	3.73	3.37	3.05	2.78	2.55	2.34	2.16	1.99	1.85	1.72	1.60	1.50	1.40	1.32
		SGU L150	13.46	9.46	6.89	5.18	3.99	3.14	2.51	2.04	1.68	1.40	1.18	1.00	0.86	0.74	0.65	0.57	0.50	0.44	0.39	0.35	0.31	0.28	0.26	0.23	0.21
		SGU L300	10.10	7.09	5.17	3.88	2.99	2.35	1.88	1.53	1.26	1.05	0.89	0.75	0.65	0.56	0.49	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.17	0.16

T60_320		Positive=Negative																									
Number of spans: 2	Thickness Jx[cm ⁴]	Case	support: 60 - 160 - 60																								
			2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00
0.60	40.07	SGN	4.78	3.96	3.34	2.86	2.47	2.17	1.91	1.69	1.51	1.36	1.23	1.11	1.01	0.92	0.84	0.77	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.42	0.40
		SGU L150	4.78	3.96	3.34	2.86	2.47	2.17	1.91	1.69	1.51	1.36	1.23	1.11	1.01	0.92	0.84	0.77	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.42	0.40
		SGU L300	4.78	3.96	3.34	2.86	2.47	2.17	1.91	1.69	1.51	1.36	1.23	1.11	1.01	0.92	0.84	0.77	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.42	0.40
0.63	42.07	SGN	5.21	4.31	3.63	3.11	2.69	2.35	2.07	1.84	1.64	1.47	1.33	1.21	1.09	0.99	0.90	0.83	0.76	0.70	0.65	0.60	0.56	0.52	0.49	0.45	0.43
		SGU L150	5.21	4.31	3.63	3.11	2.69	2.35	2.07	1.84	1.64	1.47	1.33	1.21	1.09	0.99	0.90	0.83	0.76	0.70	0.65	0.60	0.56	0.52	0.49	0.45	0.43
		SGU L300	5.21	4.31	3.63	3.11	2.69	2.35	2.07	1.84	1.64	1.47	1.33	1.21	1.09	0.99	0.90	0.83	0.76	0.70	0.65	0.60	0.56	0.52	0.49	0.45	0.43
0.70	46.75	SGN	6.18	5.11	4.31	3.68	3.18	2.78	2.45	2.17	1.94	1.74	1.57	1.42	1.28	1.16	1.06	0.97	0.89	0.82	0.76	0.70	0.65	0.61	0.57	0.53	0.50
		SGU L150	6.18	5.11	4.31	3.68	3.18	2.78	2.45	2.17	1.94	1.74	1.57	1.42	1.28	1.16	1.06	0.97	0.89	0.82	0.76	0.70	0.65	0.61	0.57	0.53	0.50
		SGU L300	6.18	5.11	4.31	3.68	3.18	2.78	2.45	2.17	1.94	1.74	1.57	1.42	1.28	1.16	1.06	0.97	0.89	0.82	0.76	0.70	0.65	0.61	0.57	0.53	0.50
0.75	50.09	SGN	6.88	5.69	4.79	4.09	3.54	3.09	2.72	2.41	2.15	1.93	1.74	1.56	1.41	1.28	1.16	1.07	0.98	0.90	0.83	0.77	0.72	0.67	0.63	0.59	0.55
		SGU L150	6.88	5.69	4.79	4.09	3.54	3.09	2.72	2.41	2.15	1.93	1.74	1.56	1.41	1.28	1.16	1.07	0.98	0.90	0.83	0.77	0.72	0.67	0.63	0.59	0.55
		SGU L300	6.88	5.69	4.79	4.09	3.54	3.09	2.72	2.41	2.15	1.93	1.74	1.56	1.41	1.28	1.16	1.07	0.98	0.90	0.83	0.77	0.72	0.67	0.63	0.59	0.55
0.80	53.42	SGN	7.56	6.25	5.26	4.48	3.88	3.38	2.98	2.64	2.35	2.11	1.89	1.69	1.53	1.39	1.26	1.16	1.06	0.98	0.90	0.84	0.78	0.73	0.68	0.64	0.60
		SGU L150	7.56	6.25	5.26	4.48	3.88	3.38	2.98	2.64	2.35	2.11	1.89	1.69	1.53	1.39	1.26	1.16	1.06	0.98	0.90	0.84	0.78	0.73	0.68	0.64	0.60
		SGU L300	7.56	6.25	5.26	4.48	3.88	3.38	2.98	2.64	2.35	2.11	1.89	1.69	1.53	1.39	1.26	1.16	1.06	0.98	0.90	0.84	0.78	0.73	0.68	0.64	0.60
0.88	58.77	SGN	8.68	7.17	6.02	5.14	4.43	3.87	3.40	3.01	2.68	2.38	2.13	1.91													

T60_320		Positives/Negative																																
Number of spans: 1		support: 60 - 60																																
Thickness	Jx[cm ⁴]	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00							
0.60	40.07	SGN	4.88	4.34	3.90	3.35	2.82	2.40	2.07	1.80	1.59	1.40	1.25	1.12	1.01	0.92	0.84	0.77	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.42	0.40	0.39	0.08	0.07	0.06			
		SGU L/150	4.88	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08	0.07	0.06	0.05	0.04			
		SGU L/200	4.04	2.84	2.07	1.55	1.20	0.94	0.75	0.61	0.50	0.42	0.35	0.30	0.26	0.22	0.19	0.17	0.15	0.13	0.12	0.11	0.09	0.08	0.07	0.06	0.05	0.04	0.03	0.02	0.01	0.00		
0.63	42.07	SGN	5.47	4.86	4.37	3.61	3.04	2.59	2.23	1.94	1.71	1.51	1.35	1.21	1.09	0.99	0.90	0.83	0.76	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.42	0.40	0.39	0.08	0.07	0.06		
		SGU L/150	5.47	3.97	2.90	2.16	1.68	1.32	1.06	0.86	0.71	0.59	0.50	0.42	0.36	0.31	0.27	0.24	0.21	0.19	0.16	0.15	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.05	0.04		
		SGU L/200	4.24	2.98	2.17	1.63	1.26	0.99	0.79	0.64	0.53	0.44	0.37	0.32	0.27	0.23	0.20	0.18	0.16	0.14	0.12	0.10	0.09	0.08	0.07	0.06	0.05	0.04	0.03	0.02	0.01	0.00		
0.70	46.75	SGN	6.76	6.01	5.12	4.23	3.56	3.03	2.61	2.28	2.00	1.77	1.58	1.42	1.28	1.16	1.06	0.97	0.89	0.82	0.76	0.70	0.65	0.61	0.57	0.53	0.50	0.49	0.08	0.07	0.06	0.05		
		SGU L/150	6.28	4.41	3.22	2.42	1.86	1.46	1.17	0.95	0.79	0.65	0.55	0.47	0.40	0.35	0.30	0.26	0.23	0.21	0.18	0.16	0.15	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06			
		SGU L/200	4.71	3.31	2.41	1.81	1.40	1.10	0.88	0.71	0.59	0.49	0.41	0.35	0.30	0.26	0.23	0.20	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.05	0.04	0.03	0.02		
0.75	50.09	SGN	7.76	6.90	5.64	4.66	3.91	3.33	2.88	2.50	2.20	1.95	1.74	1.56	1.41	1.28	1.16	1.07	0.98	0.90	0.83	0.77	0.72	0.67	0.63	0.59	0.55	0.51	0.49	0.08	0.07	0.06	0.05	
		SGU L/150	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06		
		SGU L/200	5.05	3.55	2.58	1.94	1.50	1.18	0.94	0.77	0.63	0.53	0.44	0.38	0.32	0.28	0.24	0.21	0.19	0.17	0.15	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.05	0.04	0.03		
0.80	53.42	SGN	8.83	7.55	6.11	5.05	4.24	3.62	3.12	2.72	2.39	2.11	1.89	1.69	1.53	1.39	1.26	1.16	1.06	0.98	0.90	0.84	0.78	0.73	0.68	0.64	0.60	0.57	0.54	0.51	0.49	0.08	0.07	0.06
		SGU L/150	7.18	5.04	3.68	2.76	2.13	1.67	1.34	1.09	0.90	0.75	0.63	0.54	0.46	0.40	0.35	0.30	0.27	0.24	0.21	0.19	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.06		
		SGU L/200	5.39	3.78	2.76	2.07	1.60	1.25	1.00	0.82	0.67	0.56	0.47	0.40	0.34	0.30	0.26	0.23	0.20	0.18	0.16	0.14	0.13	0.11	0.10	0.09	0.08	0.07	0.06	0.05	0.04	0.03		
0.88	58.77	SGN	10.67	8.51	6.89	5.70	4.79	4.08	3.52	3.06	2.69	2.38	2.13	1.91	1.72	1.56	1.42	1.30	1.20	1.10	1.02	0.95	0.88	0.82	0.77	0.72	0.67	0.62	0.57	0.52	0.47	0.42	0.37	
		SGU L/150	7.90	5.55	4.04	3.04	2.34	1.84	1.47	1.20	0.99	0.82	0.69	0.59	0.51	0.44	0.38	0.33	0.29	0.26	0.23	0.21	0.18	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.06	
		SGU L/200	5.92	4.16	3.03	2.28	1.76	1.38	1.11	0.90	0.74	0.62	0.52	0.44	0.38	0.33	0.28	0.25	0.22	0.19	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.05	0.04		
1.00	66.78	SGN	12.65	10.00	8.10	6.69	5.62	4.79	4.13	3.60	3.15	2.80	2.50	2.24	2.02	1.84	1.67	1.53	1.41	1.30	1.20	1.11	1.03	0.96	0.90	0.84	0.79	0.74	0.69	0.64	0.59	0.54	0.49	
		SGU L/150	8.96	6.30	4.60	3.45	2.66	2.09	1.67	1.38	1.12	0.94	0.79	0.67	0.57	0.50	0.43	0.38	0.33	0.29	0.26	0.23	0.21	0.19	0.17	0.15	0.14	0.12	0.11	0.10	0.09	0.08	0.07	
		SGU L/200	6.73	4.73	3.45	2.59	1.99	1.57	1.26	1.02	0.84	0.70	0.59	0.50	0.43	0.37	0.32	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06	0.05	
1.15	76.80	SGN	15.09	11.92	9.66	7.98	6.71	5.71	4.93	4.29	3.77	3.34	2.98	2.67	2.41	2.19	2.00	1.83	1.68	1.55	1.43	1.32	1.23	1.15	1.07	1.00	0.94	0.88	0.82	0.76	0.70	0.64	0.58	
		SGU L/150	10.32	7.25	5.28	3.97	3.06	2.41	1.93	1.57	1.29	1.08	0.91	0.77	0.66	0.57	0.50	0.43	0.38	0.34	0.30	0.27	0.24	0.22	0.20	0.18	0.16	0.15	0.13	0.12	0.11	0.10	0.09	
		SGU L/200	7.74	5.44	3.96	2.98	2.29	1.80	1.44	1.17	0.97	0.81	0.68	0.58	0.50	0.43	0.37	0.33	0.29	0.25	0.23	0.20	0.18	0.16	0.15	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06	
1.25	83.48	SGN	16.75	13.24	10.72	8.86	7.45	6.34	5.47	4.77	4.19	3.71	3.31	2.97	2.68	2.43	2.22	2.03	1.86	1.72	1.59	1.47	1.37	1.27	1.19	1.12	1.05	0.98	0.91	0.84	0.77	0.70	0.64	
		SGU L/150	11.22	7.88	5.74	4.32	3.32	2.61	2.09	1.70	1.40	1.17	0.98	0.84	0.72	0.62	0.54	0.47	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.18	0.16	0.14	0.13	0.12	0.11	0.10	
		SGU L/200	8.41	5.91	4.31	3.24	2.49	1.96	1.57	1.28	1.05	0.88	0.74	0.63	0.54	0.47	0.40	0.35	0.31	0.28	0.25	0.22	0.20	0.18	0.16	0.14	0.13	0.12	0.11	0.10	0.09	0.08	0.07	0.06
1.50	100.17	SGN	21.05	16.63	13.47	11.13	9.35	7.97	6.87	5.99	5.26	4.66	4.16	3.73	3.37	3.05	2.78	2.55	2.34	2.16	1.99	1.85	1.72	1.60	1.50	1.40	1.32	1.24	1.16	1.08	1.00	0.92	0.84	
		SGU L/150	13.46	9.46	6.89	5.18	3.99	3.14	2.51	2.04	1.68	1.40	1.18	1.00	0.86	0.74	0.65	0.57	0.50	0.44	0.39	0.35	0.31	0.28	0.26	0.24	0.21	0.19	0.17	0.16	0.14	0.13	0.12	
		SGU L/200	10.10	7.09	5.17	3.88	2.99	2.35	1.88	1.53	1.26	1.05	0.89	0.75	0.65	0.56	0.49	0.42	0.37	0.33	0.29	0.26	0.24	0.21	0.19	0.17	0.16	0.14	0.13	0.12	0.11	0.10	0.09	
Number of spans: 2		support: 60 - 300 - 60																																
Thickness	Jx[cm ⁴]	Case	2.00	2.25	2.50	2.75	3.00	3.25	3.50	3.75	4.00	4.25	4.50	4.75	5.00	5.25	5.50	5.75	6.00	6.25	6.50	6.75	7.00	7.25	7.50	7.75	8.00							
0.60	40.07	SGN	5.24	4.31	3.62	3.08	2.66	2.31	2.03	1.80	1.59	1.40	1.25	1.12	1.01	0.92	0.84	0.77	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.42	0.40	0.39	0.08	0.07	0.06			
		SGU L/150	5.24	4.31	3.62	3.08	2.66	2.31	2.03	1.80	1.59	1.35	1.14	0.97	0.83	0.72	0.62	0.55	0.48	0.42	0.38	0.34	0.30	0.27	0.25	0.22	0.20	0.18	0.17	0.15	0.14			
		SGU L/200	5.24	4.31	3.62	3.08	2.66	2.26	1.81	1.47	1.21	1.01	0.85	0.73	0.62	0.54	0.47	0.41	0.36	0.32	0.28	0.25	0.23	0.20	0.18	0.17	0.15	0.14	0.12	0.11	0.10	0.09		
0.63	42.07	SGN	5.69	4.69	3.93	3.34	2.88	2.51	2.20	1.94	1.71	1.51	1.35	1.21	1.09	0.99	0.90	0.83	0.76	0.70	0.65	0.60	0.56	0.52	0.48	0.45	0.42	0.40	0.39	0.08	0.07	0.06		
		SGU L/150	5.69	4.69	3.93	3.34	2.88	2.51	2.20	1.94	1.70	1.42	1.19	1.02	0.87	0.75	0.65	0.57	0.50	0.45	0.40	0.35	0.32	0.29	0.26	0.23</								



BLACHPROFIL 2 Sp. z o.o.
30-527 Kraków, ul. Nadwiślańska 11/139
NIP: 6762431701, Regon: 121387608

edition: November 2020

EN